

INSTALLATION INSTRUCTIONS

<u>Product</u> 7160-0489, 7160-0490 FZ-G1 CRADLE **Revision**

Rev. B

Form
INST-604

Printing Spec: PS-004


This instruction sheet is for the FZ-G1 cradle only. For instructions on features, setup, and operation of the FZ-G1 computer, please refer to the manual provided by Panasonic with the computer.

This cradle is designed to be used with a variety of Gamber-Johnson mounting systems. Installation instructions for other Gamber-Johnson products are provided with each individual product.

This instruction sheet is for the following products:

Item No. 7160-0489-00 Keyed alike, No RF **Item No. 7160-0489-03** Keyed different, No RF

Item No. 7160-0490-00 Keyed alike, No RF **Item No. 7160-0490-03** Keyed different, No RF

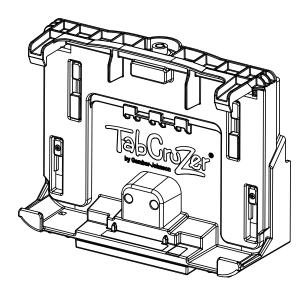



Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2016 Gamber-Johnson, LLC

FZ-G1 CRADLE FEATURE IDENTIFICATON

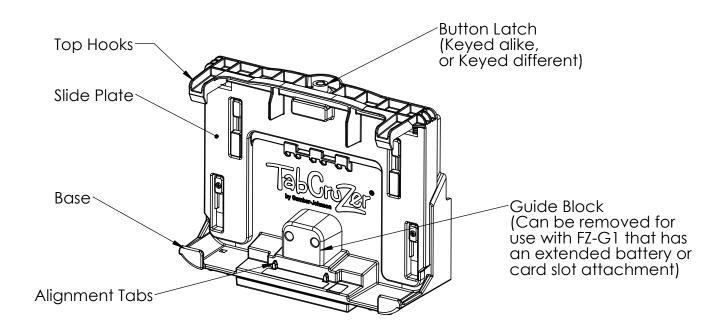

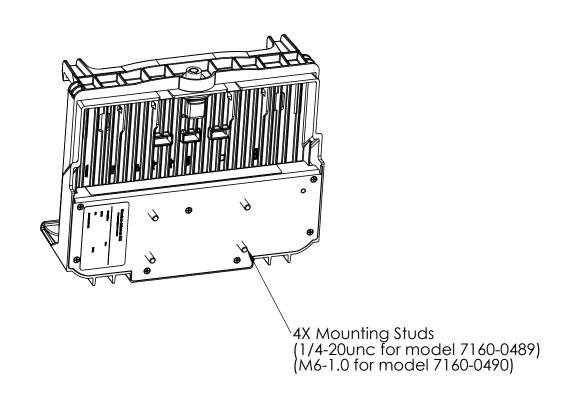

INSERTING THE COMPUTER INTO THE CRADLE

1. With the slide plate in the open position, insert the bottom of the computer into the cradle. Make sure the guide tabs are lined up with the pockets on the back side of the computer.

Rotate the top of the computer under the top hooks until the computer is resting on the two vertical walls sticking out from the slide plate. (see Figues 1, 2 & 3)

(Note: If your FZ-G1 computer has an extended battery or card slot attachment on the back side, you will need to remove the guide block from the face of the dock before inserting the computer.)

- 3. Push downward on the slide plate to latch the cradle. (See Figure 4)
- 4. (Optional) The key lock can now be used for security purposes.

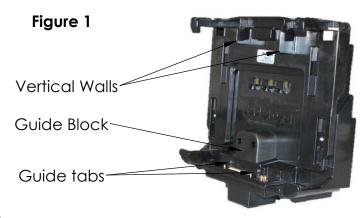


Figure 2



Figure 3



TO REMOVE THE COMPUTER

- 1. Unlock if locked.
- 3. Press the Latch Button. The slide plate is spring loaded and should raise with your hand when you release the button.
- 4. Rotate the top of the computer out of the dock to remove.

Figure 4

