




INSTALLATION INSTRUCTIONS

<u>Product</u>	<u>Revision</u>	<u>Form</u>
7160-1581, 7160-1583	Rev A	INST-1005
STAND - IPAD 10.2 WITH/WITHOUT MAGTEK IDYNAMO6		Printing Spec: PS-001

These instructions will cover the installation of the Gamber-Johnson counter top stand for an iPad 10.2 with/without the Magtek iDynamo6 card reader and both fixed/rotating.

7160-1581-01 - Fixed Stand for iPad 10.2
7160-1581-02 - Rotating Stand for iPad 10.2

7160-1583-01 - Fixed Stand for iPad 10.2 with Magtek iDynamo6
7160-1583-02 - Rotating Stand for iPad 10.2 with Magtek iDynamo6

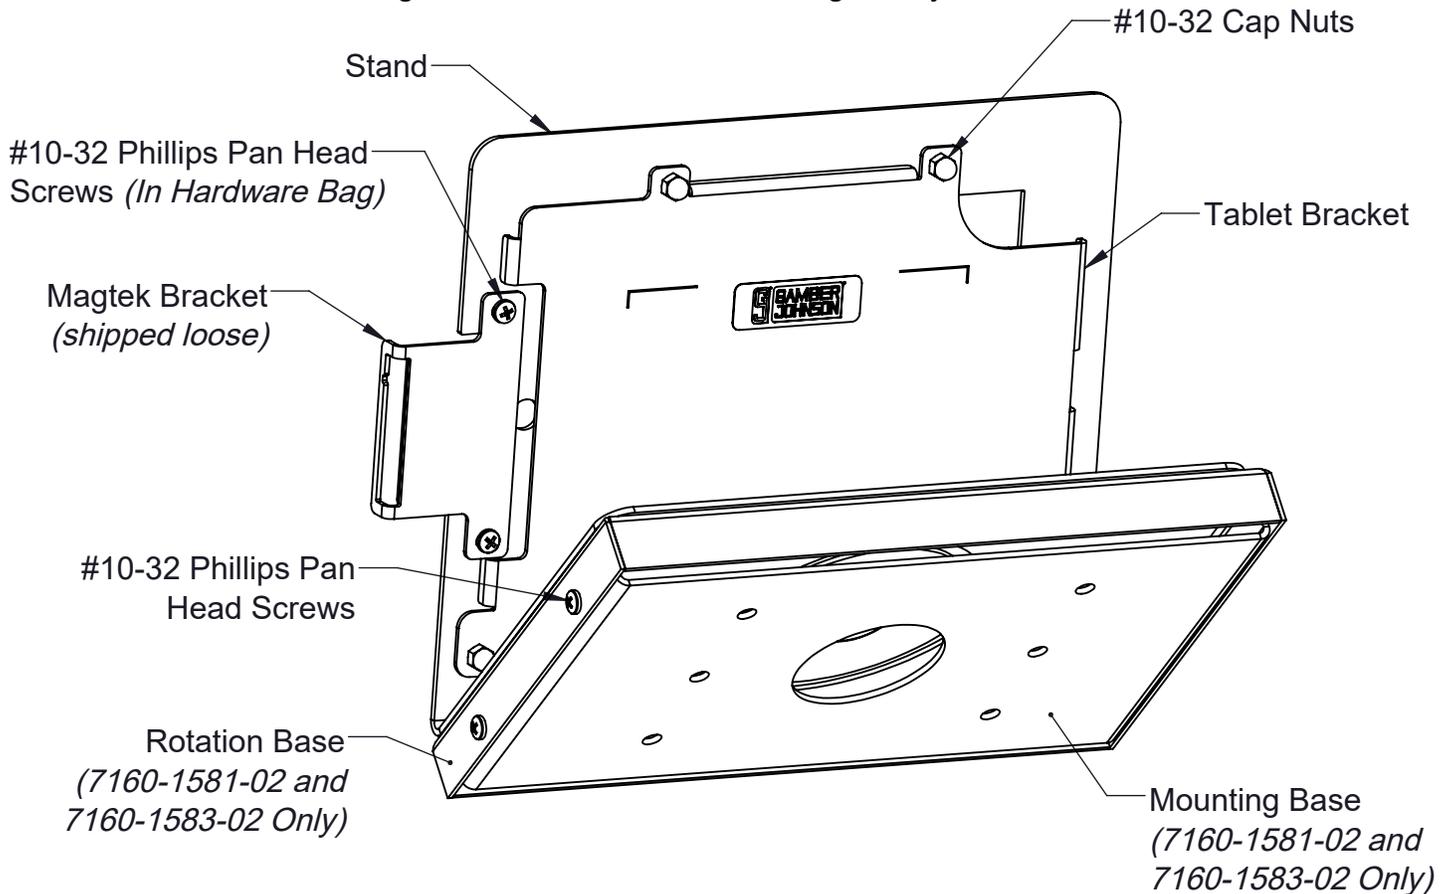

Assembly Components - 7160-1583-02 Shown

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2020 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

To Install:

1. To install a fixed stand without rotation skip to step 4 below.

For a bolted connection begin by using the mounting base as a template marking the holes to be used for the 1/4-20 x 2 hex bolts included in the hardware bag as well as the center cable routing hole. The mounting base can be removed by removing the (4) #10-32 phillips pan head screws holding it to the rotation base.

Note: The mounting base can be mounted using self adhesive tape (not provided) where drilling is not possible.

2. Bolt the mounting base to the surface using the 1/4-20 x 2 hex bolts, 1/4 washers and 1/4-20 nylok nuts provided; placing a washer both on top of the mounting plate and below the surface.
3. Mount the rotation base and stand back onto the mounting plate using the (4) #10-32 phillips pan head screws removed in step 1.

Note: Test the resistance of the rotation before moving on to the following step. To adjust, tighten or loosen the two 1/4-20 nylok nuts underneath the rotation base using a 7/16" wrench or socket.

4. To mount the fixed stand, use the stand as a template and mark the two holes in the base of the stand as well as the center cable routing hole then drill. Bolt the stand to the surface using the 1/4-20 x 2 hex bolts, 1/4 washer and 1/4-20 nylok nuts provided placing a washer both on top of the stand and below the surface.

Note: The stand can be mounted using self adhesive tape (not provided) where drilling is not possible.

5. To install the tablet onto the stand remove the tablet bracket from the stand by removing the (4) #10-32 cap nuts. Once removed place the tablet onto the foam pads on the bracket centering it and facing the correct direction to align with the holes in the stand. Place the tablet bracket back onto the studs and reinstall the (4) #10-32 cap nuts. Do not tighten yet.

With the cap nuts still slightly loose shift the tablet to align the screen with the cut out on the stand. Tighten the cap nuts until snug, do not overtighten. Install any cables (not provided) to the tablet routing them through the tablet bracket and down through the center cable hole if desired. This completes the installation of the stands without the Magtek iDynamo6.

For 7160-1583-01 and 7160-1583-02 with Magtek iDynamo6 Bracket:

6. Place the Magtek iDynamo6 card reader onto the Magtek bracket so that the card chip reader slot protrudes through and aligns with the hole on the bracket. Connect the reader's connector to the tablet. The two slots on the Magtek bracket should align with the two standoffs on the stand. Insert (2) #10-32 phillips pan head screws (included in the hardware bag) and tighten once the card reader and tablet are properly aligned.
7. Plug in the USB cable (not provided) into the card read and route it behind the tablet bracket and down through the center hole through the surface if desired.