


# INSTALLATION INSTRUCTIONS

<b><u>Product</u></b>	<b><u>Revision</u></b>	<b><u>Form</u></b>
<b>7110-1024 WIRE CHASE ASSEMBLY - TAHOE CONSOLE BOX</b>	Rev.A	INST-641
<b>Printing Spec: PS-001</b>		

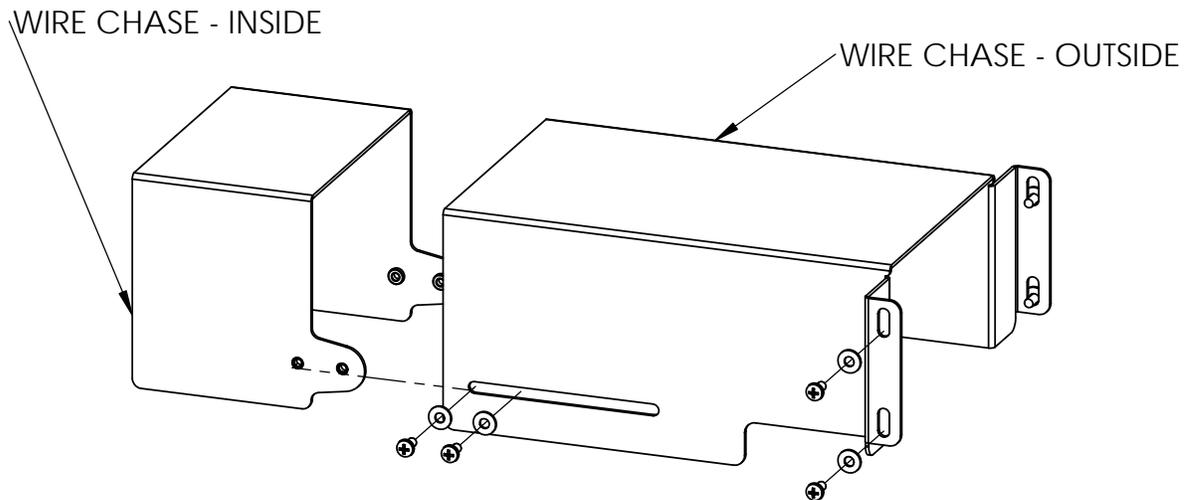

## PARTS LIST

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>
15225	WIRE CHASE - OUTSIDE	1
15249	WIRE CHASE - INSIDE	1
7120-0641	7120-0641	1
• 1122-1006	• #10-32 X .375 PPHMS	• 8
• 3130-0579	• #10 FLAT WASHER	• 8

## TOOLS NEEDED

PHILLIPS SCREW DRIVER

## INSTALLATION INSTRUCTIONS

- Insert the Wire Chase - Inside box into the Wire Chase - Outside box, slide it in or out to desired length and secure it from either sides using provided hardware.
- Secure the Wire Chase Assembly to the console box using provided hardware, see figure above.

### Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2014 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868