



Very Well Connected™

INSTALLATION INSTRUCTIONS

Product
7160-0375

Revision
Rev.A

Form
INST-589

MCS-EXTENDED PANEL ARMREST

Printing Spec: PS-001

Fig. 1 -
Remove the Holddown Rails and use a utility knife to cut out 2" sections of the dual-lock fastener material from both console box flanges in the area the Armrest Panel will be mounted.

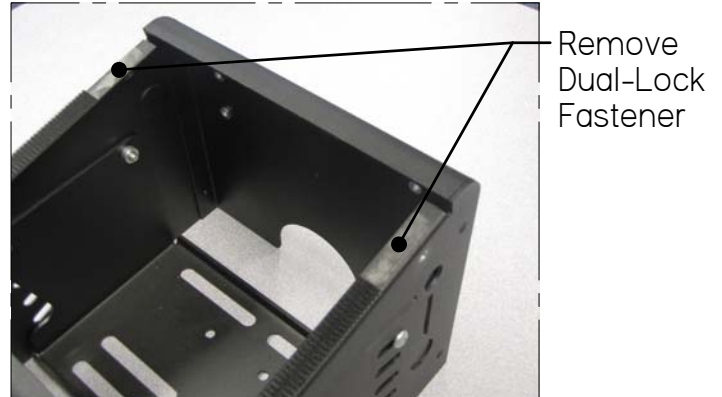


Fig. 2 -
Place the Armrest Assembly in the prepared area and attach any other panels or faceplates being installed to the dual-lock fastener material as usual.


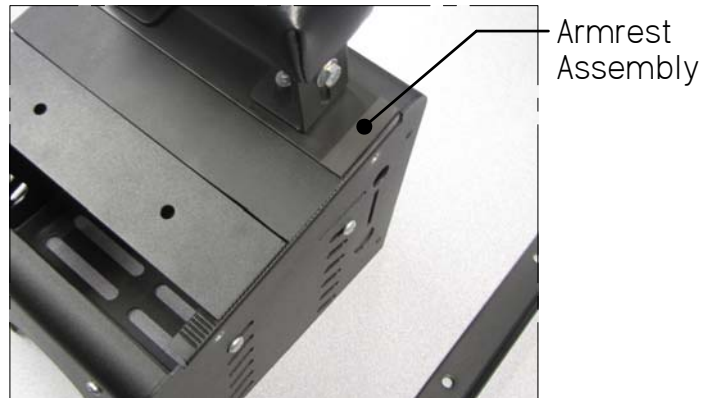


Fig. 3 -
Reinstall the Holddown Rails to seure the Armrest Assembly and equipment in place.

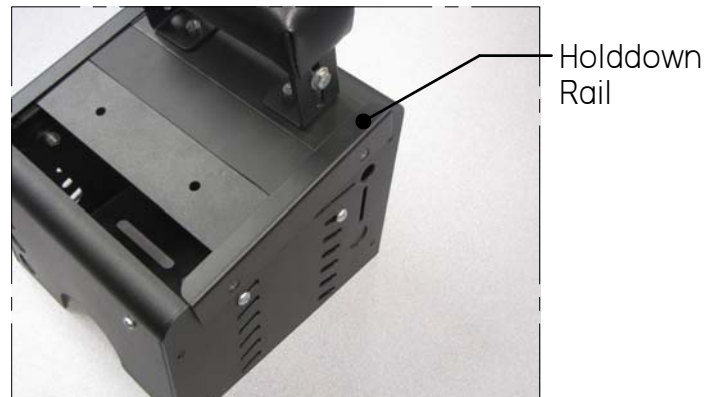

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© copyright 2012 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868