



Very Well Connected™

# INSTALLATION INSTRUCTIONS

**Product**  
**7160-0413**

**Revision**  
**Rev.B**

**Form**  
**INST-566**

**Description** FORD NGPI LEG KIT, 2012+

**Printing Spec:**PS-001

Remove the stock tunnel plate by removing the 6 bolts. Note that in the Utility Interceptor the lower portion of the dash will need to be removed in order to access the front mounting bolts.

Install the two brackets as shown in figure 1 with the hardware removed from the stock tunnel plate. The rear bracket will be installed with the shorter bolts removed from the center of the stock tunnel plate.

Once the leg kit is installed the top plate (not included) can be bolted to the supplied PEM nuts

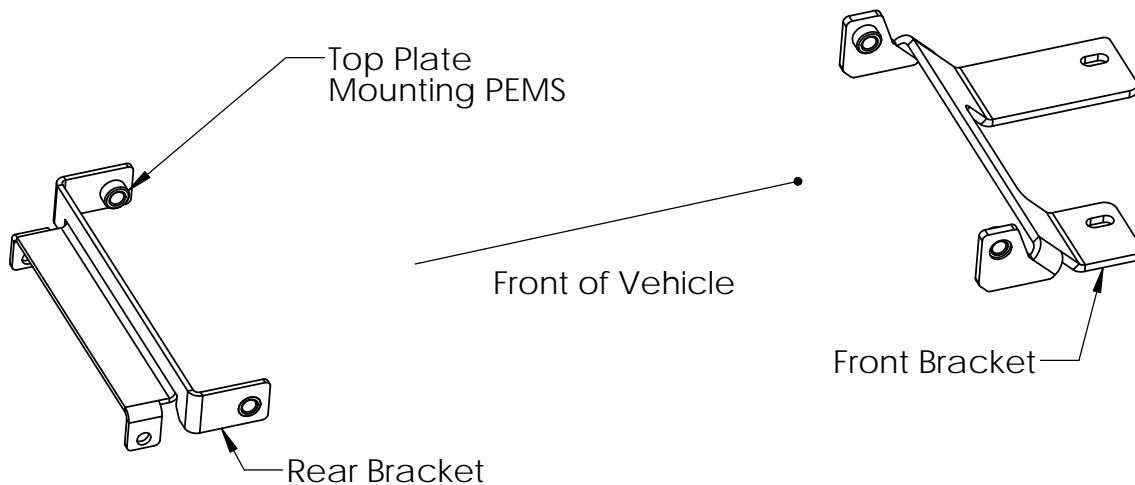


Fig. 1 - Leg Kit Orientation

Note:

If there is no factory front console plate(Top Plate) installed, use hardware bag 7120-0630(included) for required hardware

**Product Mounting Disclaimer**

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© copyright 2011 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868