


INSTALLATION INSTRUCTIONS


<p>Product 7160-0422</p> <p>LEG KIT - CHYRSLER/DODGE - RAM - 1500 & 1500SSV - 2011+</p>	<p>Revision Rev.B</p>	<p>Form INST-569</p> <p>Printing Spec: PS-001</p>
---	----------------------------------	--

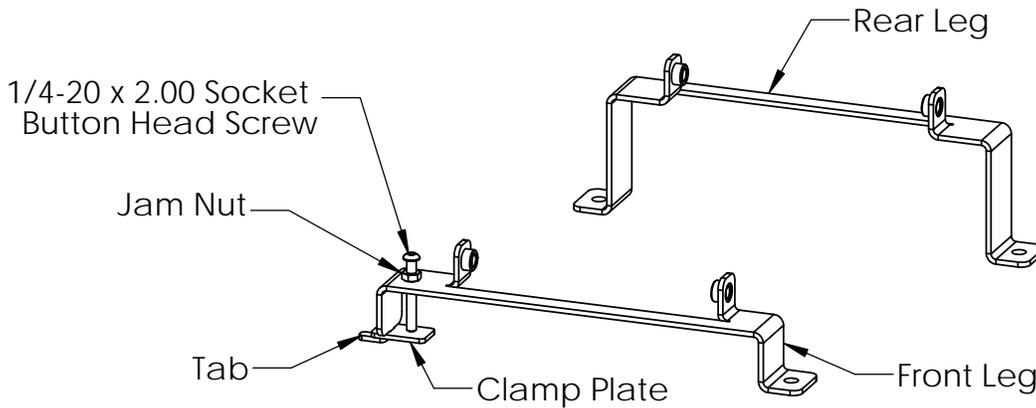

1. Remove center seat section and seat brackets.
Note the mounting points for the Front Leg - a M8 threaded hole toward the drivers side, a thru hole toward the passengers side (under carpet).

2. Assemble 1/4-20 x 2.00" Button Head Screw, jam nut and Clamp Plate to Front Leg as shown above. Insert tab on Front Leg into thru hole as shown in photo.

M8 threaded hole thru hole

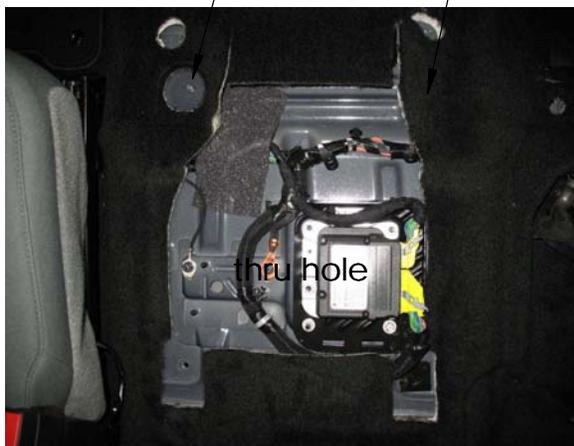

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2013 Gamber-Johnson, LLC



3. Attach Front Leg to center seat section mounting point, reusing original seat bolt or the M8 bolt supplied in the hardware bag.



4. Tighten the 1/4-20 x 2.00 Socket Button Head Screw with a 5/32" Hex bit against Clamp Plate, until the Front Leg Tab is wedged in mounting hole.

Tighten the Jam Nut against Front Leg to lock the Button Head Screw in place. Applying a threadlocking adhesive to the screw and nut is recommended.



5. Attach Rear Leg to center seat section mounting points, reusing original seat bolts or the M8 bolts supplied in hardware bag.



6. Attach Top Plate using 3/8- 16 x .75 bolts and washers supplied in hardware bag.