



Very Well Connected™

# INSTALLATION INSTRUCTIONS

## Product

**7160-0425**

## Revision

Rev.A

## Form

INST-570

**BROTHER RUGGED JET PRINTER MOUNT**

Printing Spec: PS-001

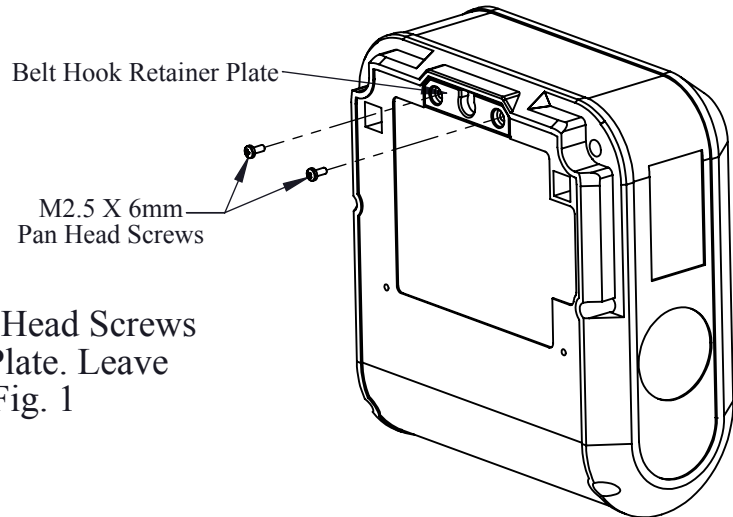


Fig. 1

1. Remove the two M2.5 X 6mm Pan Head Screws that retain the Belt Hook Retainer Plate. Leave Belt Hook Retainer Plate in place. Fig. 1

2. Place Bracket on back side of printer such that Bracket Hooks go into rectangular cavities. Slide Bracket towards top of printer until Bracket Hooks engage upper edge of rectangular cavity. Install the four M2.5 X 10mm Flat Head Screws. Fig. 2

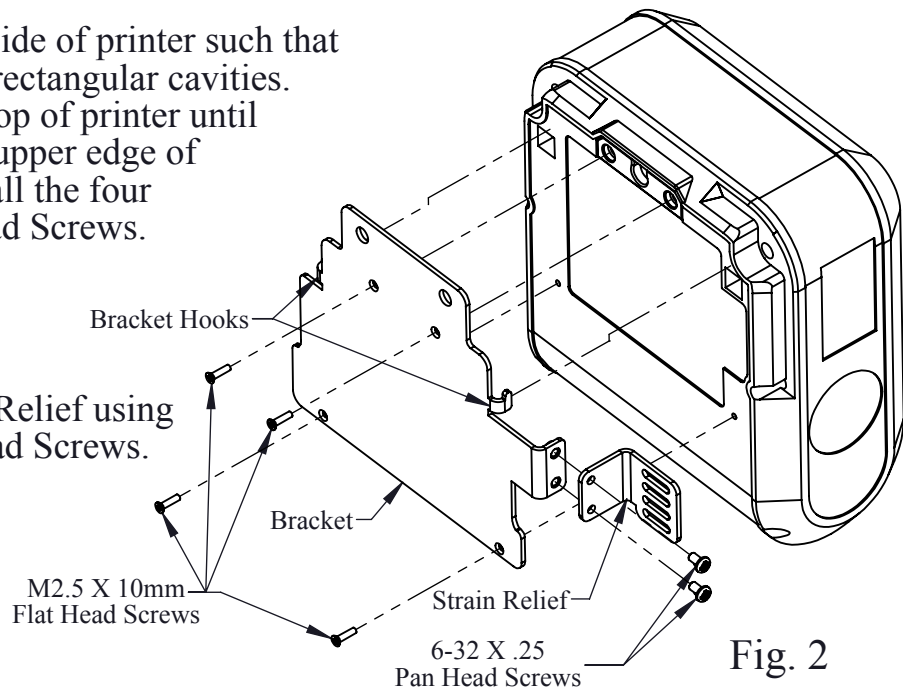


Fig. 2

3. If desired attach Strain Relief using two 6-32 X .25 Pan Head Screws. Fig. 2

### Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2012 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868