



Very Well Connected™

INSTALLATION INSTRUCTIONS

Product**7160-0493****INTERFACE - INTERMEC CV61****Revision**

Rev.A


Form

INST-599

Printing Spec: PS-001

This instruction sheet is for the Intermec CV61

ITEM	QTY	PartNo	DESCRIPTION
1	1	15019	INTERMEC CV61 INTERFACE BRACKET
2	1	7120-0604	HARDWARE BAG - INTERMEC CV61 INTERFACE

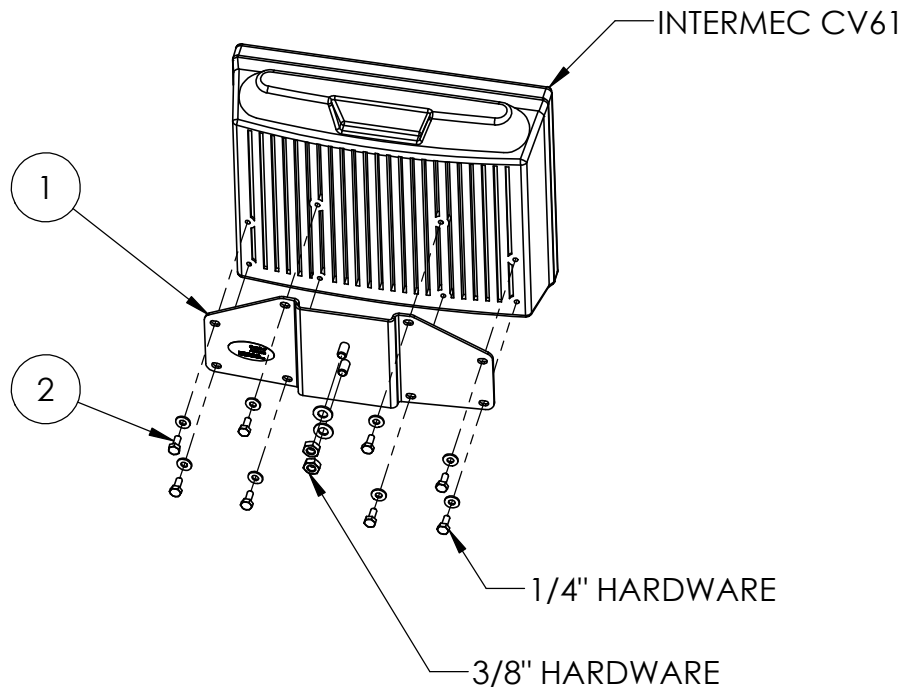

1.) Attach the interface bracket #15019 to the back side of the Intermec CV61 computer with the 1/4" fasteners and washers as shown. Torque to 85 IN/LBS.

2.) Mount the unit on the appropriate base with the 3/8" nuts and washers as shown.

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2013 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868