


INSTALLATION INSTRUCTIONS

Product VEHICLE BASE -NISSAN NV200 (2010+) CHEVY CITY EXPRESS (2015+) CHEVY VOLT (2010 - mid-2015) **Revision**

Form

Printing Spec: PS-001

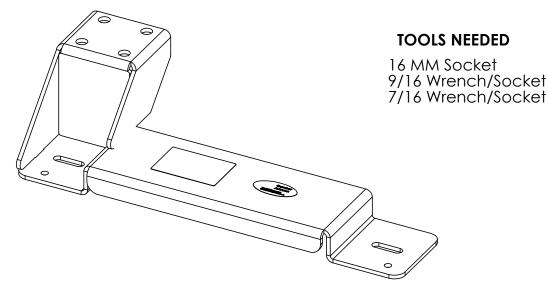

PARTS LIST		
PART NO.	DESCRIPTION	QUANTITY
15055)/alaiala Dava	1
15255	Vehicle Base	I
7120-0215	Hardware Bag	1
•1173-3812	3/8-16 X .75 HHCS	• 4
•3130-0052	3/8 Washer	• 4
7120-0707	Hardware Bag	1
•1173-1412	1/4-20 x .75 HHCS	•2
•3130-0027	1/4 Washer	•2
•1503-1400	1/4 Nylok Nut	•2
INST-644	Instruction Sheet	1

Product Mounting Disclaimer

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2015 Gamber-Johnson, LLC





- You must read and follow all of these installation instructions. Failure to follow all of these installation instructions may result in seriuos bodily injury or death.
- Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product.
- Additional copies of the installation instructions can be obtained from Gamber Johnson.
- If you need assistance or have any questions, call Gamber-Johnson at 1-800-456-6868.
- Do not remove warning label from product under any circumstances.
- Before installation of any equipment always check area for routing of wires / cables and if drilling is required check area where drilling above and below the drilling area.
- High speed vehicle turns may cause a motion attachment product to swivel, interfering with the driver or other equipment.
- The Vehicle Base, Upper Pole, Motion Attachment and Dock or Cradle should not be positioned in the area where the airbag will be deployed if it is activated. DO NOT postion the equipment in front of an airbag. Equipment positioned in front of an airbag can cause serious injury or death if and airbag was activated, such as in an accident.
- The installer and user of this product(s) are responsible for installing and using Upper Pole, Motion Attachment and Dock or Cradle assemblies outside the airbag deployment zone. (See Product Mounting Disclaimer Below)
- If installation of the equipment requires that the equipment be placed in front of an airbag, deactivate the airbag in the vehicle so it cannot be activated in and accident. In order to secure permission for deactivating the airbag in these circumstances, contact the National Highway Traffic Safety Administration at 1-800-424-9393 to gain permission to do so. If you have any questions or need assistance, call Gamber Johnson at 1-800-456-6868.



INSTALLATION PROCEDURE:

Nissan NV200 **Chevy City Express**

- Remove the front seat bolts of the passenger seat using a 16 mm socket.
- 2. Lift the seat up and slide the base such the floor hole's match the slots in the base.
- 3. Re-install the front seat bolts and tighten them.
- Attach pole using 3/8-16 bolts supplied in 7120-0215 Hardware Bag. 4.




INSTALLATION PROCEDURE:

Chevy Volt

(Note: Long Support Brace 7160-0231 is required for the Chevy Volt install)

- 1. Do not remove seat bolts which attach the passenger seat to the floor.
- 2. Slide the vehicle base <u>under</u> the front edge of the seat rails.
- 3. Install .25-20 bolts, washers and nuts, supplied in 7120-0707 Hardware Baa. thru existing holes in seat rails to attach vehicle base.
- Attach pole using 3/8-16 bolts supplied in 7120-0215 Hardware Bag.

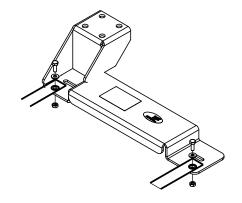

Product Mounting Disclaimer

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program. © Copyright 2015 Gamber-Johnson, LLC