



Very Well Connected™

INSTALLATION INSTRUCTIONS

Product
7160-0572

BASE - CHEVY EQUINOX/GMC TERRAIN 2010+

Revision
Rev.D

Form
INST-650

Printing Spec: PS-001

PLEASE NOTE: Vehicle base is not compatible with powered seats

Required tools:

7/16" Drill Bit and Drill Motor
3/8" Socket Wrench
5/16" Socket Wrench

- You must read and follow all of these installation instructions. Failure to follow the installation instructions may result in serious bodily injury or death
- DO NOT install or use this assembly in the area in which the airbag on the vehicle may be deployed. The installer and user of this assembly are responsible for installing and using this assembly outside the area in which an airbag may be deployed. (See Product Mounting Disclaimer Below)
- Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product.
- Additional copies of the installation instruction can be obtained from Gamber-Johnson. If you need assistance or have any questions, go to www.gamberjohnson.com or call Gamber-Johnson at 1-800-456-6868.
- DO NOT remove the warning label from product under any circumstances.



Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2013 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

Install Vehicle Base:

1. Move passenger seat to furthest back position.
2. Pop out the trim clip that is on the front part of the trim on outside passenger seat rail. Move trim out of the way slightly.
3. Drill second hole on inboard seat rail due to weight of the equipment on that rail. Drill a $7/16$ " hole located, $1-1/8$ " back from the front hole of the inside seat rail on the passenger seat. Ensure that this hole is aligned with the front hole. (Figure 1 shows side of rail to drill into)
4. Slide base under the seat rails and align the four holes with the PEMs of the base.
5. Insert and tighten a total of two $3/8$ " bolts and washers in the rear most holes of the base and seat rail
6. Insert and tighten a total of two $5/16$ " bolts and washers in the front most holes of the base and seat rail.
7. Push trim back in place that was moved in step 2. Pop trim clip back in as well.

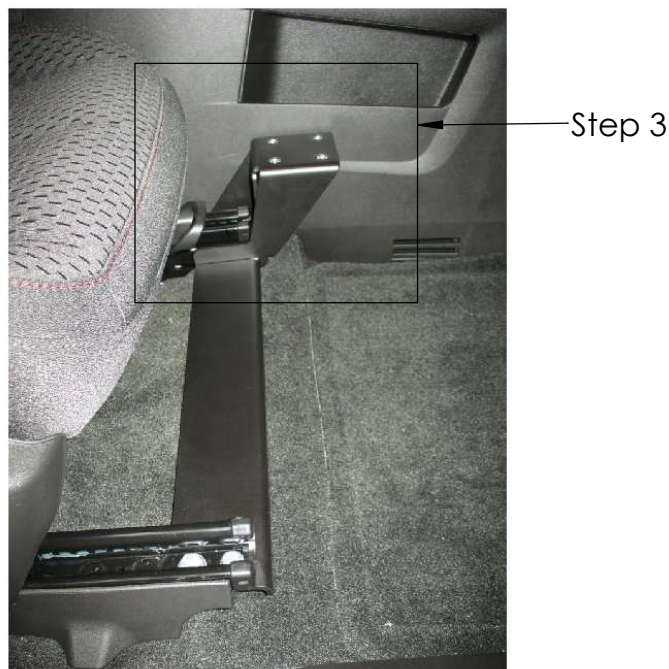


Figure 1



- This assembly should not be positioned in the area where the airbag may be deployed.
- DO NOT position the equipment in front of an airbag. Equipment positioned in front of an airbag may cause serious injury or death if an airbag is activated.
- If installation of the equipment requires that the equipment be placed in front of an airbag, the airbag should be deactivated. In order to secure permission for deactivating the airbag you must contact the National Highway Traffic Safety Administration at 1-800-424-9393 to gain permission to do so. If you have any questions or need assistance, call Gamber-Johnson at 1-800-456-6868.
- High speed vehicle turns may cause parts of the assembly to swivel, interfering with the driver or other equipment.