

INSTALLATION INSTRUCTIONS


Product
7160-0593 - QUICK RELEASE MOUNTRevision
Rev AForm
INST-665Printing Spec: PS-001

The following instruction sheet is for the part number listed above. This mount is designed to attach to the overhead guard leg as a no drill solution, and cowling/frame as a drilled solution.

The quick release mount assembly attaches to the overhead guard leg on the lift truck. It is compatible with overhead guard legs from 1 1/2" to 5" wide. The mount is held in place with 3/8" dia. carriage bolts. The quick release mount is also compatible with the 7160-0561 tube clamp and the 7160-0418 roll form bracket.

Attach the quick release mount bottom plate to the overhead guard leg or cowling/frame using the 3/8" carrage bolts and back plate. 7160-0593 fits tubes 1 1/2" to 2 1/2" wide.

Please contact your reseller to obtain the hardware kit to fit tubes 2 1/2" to 5" wide.

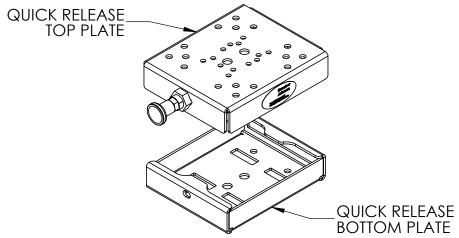

WARNING!

TO PREVENT INJURY ENSURE LATCH MECHANISM IS FULLY ENGAGED

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© copyright 2011 Gamber-Johnson, LLC