



Very Well Connected™

INSTALLATION INSTRUCTIONS

Product

7160-0750

Revision

Rev.A


Form

INST-676

Riveted Clevis with Anchor Plate Assembly

Printing Spec: PS-001

Tighten or loosen nut
for desired swivel tension

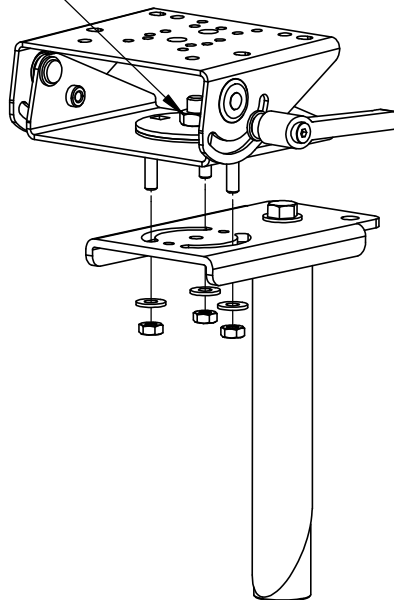

INSTALL ON EQUIPMENT WITH GAMBER-JOHNSON SWIVEL PATTERN CUTOUT

1. Remove 1/4-20 lock nuts and washers from clevis.
2. Place Clevis on equipment with studs going through the curved slots on mounting surface.
3. Re-attach washers and nuts and tighten in place.

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2015 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868