



Very Well Connected™

INSTALLATION INSTRUCTIONS

Product**7160-0451****Revision**

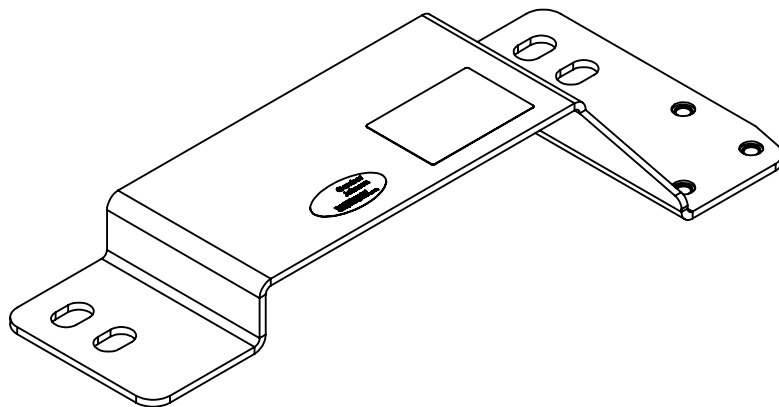
Rev.B

Form

INST-584

**Ford Escape, Jeep Patriot & Compass,
Dodge Journey & Caliber Base****Printing Spec: PS-001**

- You must read and follow all of these installation instructions. Failure to follow all of these installation instructions may result in serious bodily injury or death.
- Do not install or use the 7160-0451 assembly in the area in which the airbag on the vehicle may be deployed. The installer and user of the 7160-0451 assembly are responsible for installing and using the 7160-0451 assembly outside the area in which an airbag may be deployed. (See Product Mounting Disclaimer Below)
- Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product.
- Additional copies of the installation instructions can be obtained from Gamber-Johnson. If you need assistance or have any questions, call Gamber-Johnson at 1-800-456-6868
- Do not remove warning label from product under any circumstances.

**Product Mounting Disclaimer**

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2015 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

INSTALLING THE 7160-0451:

1. Remove the four bolt covers on the passenger seat to gain access to the seat bolts.
2. Remove the front two seat bolts that attach the passenger seat to the floor.
3. Loosen the two rear seat bolts about 1 to 2 turns. Loosen enough so the seat can be tilted back to install the base between the front of the passenger seat and the floor.
4. Reinstall the front seat bolts through the base into the floor. Tighten the bolts in place.
5. Tighten the rear seat bolts that were previously loosened.
6. Re-install the four bolt covers removed in step one.



ATTACHING THE POLE:

1. The pole is attached with the (4) 3/8" bolts and washers provided in hardware bag 7120-0039.



WARNING

- The 7160-0451 assembly should not be positioned in the area where the airbag may be deployed.
- DO NOT position the equipment in front of an airbag. Equipment positioned in front of an airbag may cause serious injury or death if an airbag is activated.
- If installation of the equipment requires that the equipment be placed in front of an airbag, you must contact the National Highway Traffic Safety Administration at 1-800-424-9393 to gain permission to do so. If you have any other questions or need assistance, call Gamber-Johnson at 1-800-456-6868.
- High speed vehicle turns may cause parts of the upper level assembly to swivel, interfering with the driver or other equipment.

