

INSTALLATION INSTRUCTIONS

Product

DS-122 VEHICLE BASE

Revision

Rev.B

Form #

INST-150


CHEVROLET 1500/2500/3500 C/K (1999-2006 & 2007 CLASSIC BODY STYLE)
CHEVROLET AVALANCHE (2002-2006)
CHEVROLET SILVERADO (1999-2006 & 2007 CLASSIC BODY STYLE)
CHEVROLET SUBURBAN (2000-2006)
CHEVROLET TAHOE (2000-006)
GMC SIERRA (2000-2006 & 2007 CLASSIC BODY STYLE)
GMC YUKON/YUKON XL (2000-2006)

Printing Spec: PS-001

The DS-122 is a No Holes Bored base that mounts between the upper portion of the passenger seat track and seat cushion.

Installation of the DS-122: See Figure I.

1. Remove the (2) front 5/16" hex nuts that hold the passenger seat cushion to the seat track brackets.
2. Lifting on the front of the seat cushion, separate the front of the seat from the seat track brackets.
3. Position the DS-122 on top of the seat track brackets so the slots in the DS-122 line up with the holes in the seat track brackets.
4. Lower the seat cushion back into place, allowing the studs to pass through the holes in the DS-122 and seat track brackets.
5. Re-attach the (2) 5/16" hex nuts that you removed in step 1.

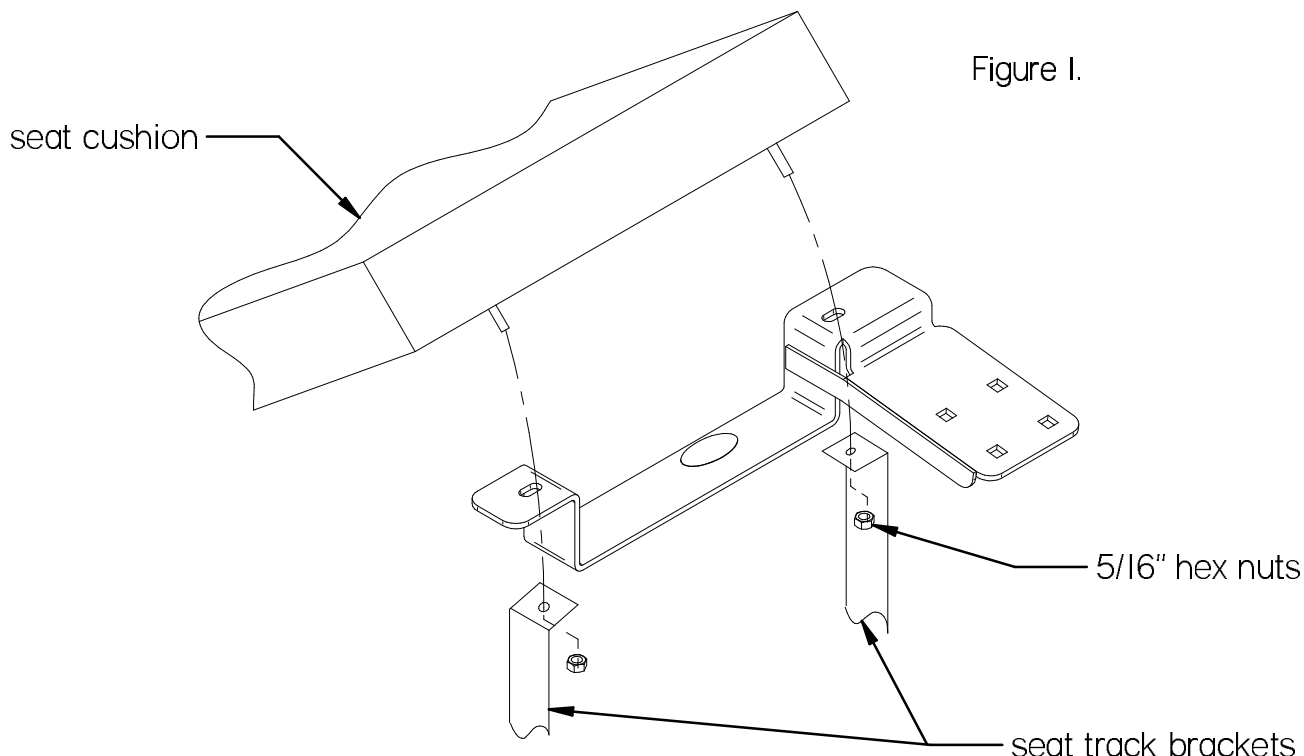

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© copyright 2012 Gamber-Johnson, LLC

Installation of Optional Gusset: See Figure 2.

The optional Silverado Gusset is a brace used to stabilize the mount, and to lock the seat in place.

1. Move the passenger seat back to the rear most position.
2. Remove the transmission side seat nut that attaches the passenger seat to the floor.
3. Place the gusset over the floor stud and replace the nut. Do not tighten at this time.
4. Attach the pole to the mount using the 3/8" hardware that was provided with the pole. Replace two of the 3/8-16unc x 3/4" carriage bolts with the (2) 3/8-16unc x 1.00 long carriage bolts that were provided in hardware bag 7120-0237. Tighten the bolts in place.
5. Tighten the seat nut to the floor (from step 3).

