INSTALLATION INSTRUCTIONS

Product Revision DS-144 VEHICLE BASE Rev.C

CHEVROLET/GMC 1500/2500/3500 C/K (2007+) CHEVROLET AVALANCHE (2007+) CHEVROLET SILVERADO (2007+) CHEVROLET SUBURBAN (2007+) CHEVROLET TAHOE (2007+)


GMC SIERRA (2007+)

GMC YUKON YUKON XL (2007+)

Printing Spec: PS-001

The DS-144 is a No Hole Bored base for the vehicles listed above.

- I. Begin by removing the two nuts located on the front passenger's seat nearest the front of the vehicle with an E-18 Inverted Torque Socket.
- 2. Next loosen the bolts on the rear of the front passenger's seat with a E-14 Inverted Torque Socket. It is not necessary to remove these fasteners.
- 3. Lift up on the front of the seat and place the DS-144 on to the threaded studs using the primary mounting slots (see FIG. I).
- 4. There are secondary mounting slots available if you wish to fasten the DS-144 to the floor with self-drilling screws or bolts (see FIG. I).

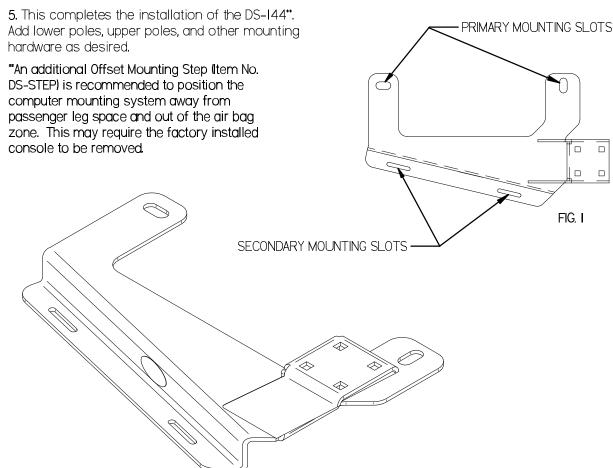

Product Mounting Disclaimer
Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program. © copyright 2012 Gamber-Johnson, LLC