



INSTALLATION INSTRUCTIONS

Product
7160-0352

Revision
Rev.A

Form
INST-539

CF19/Harley Police Tour-Pak Mount

Printing Spec: PS-001

These instructions cover installation of 7160-0352 CF19/Harley Police Tour-Pak Mount.

The Tour-Pak itself should be installed on the motorcycle according to Harley-Davidson Instructions.

Tools required for installing are a 7/16 Socket and Ratchet or a 7/16 Wrench and a Phillips Drive Screwdriver



Fig 1 -
Remove the Upper & Lower mounting plates and Hex standoffs, if installed inside Tour-Pak.

Leave (5) Rubber Isolator Studs assembled to bottom of Tour-Pak.

(5) Rubber Isolator Studs



Fig 2 -
Install the 7160-0352 CF19/Harley Police Tour-Pak Mount over the Rubber Isolator Studs and secure with (5) .25-20 Nylok Nuts and (5) .25 Flat Washers.

The mount will open out toward the right side of the motorcycle.

(5) .25-20 Nylok Nuts and .25 Flat Washers

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© copyright 2011 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

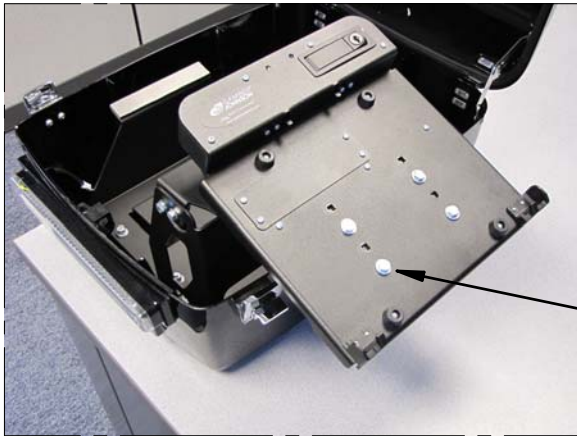


Fig 3 -
Attach the CF19 Cradle or Dock to the mount using (4) .25-20 x .75 Hex Head Screws and (4) .25 Flat Washers, supplied in the Cradle or Dock Hardware Bags.

(4) .25-20 x .75 Hex Head Screws and .25 Flat Washers

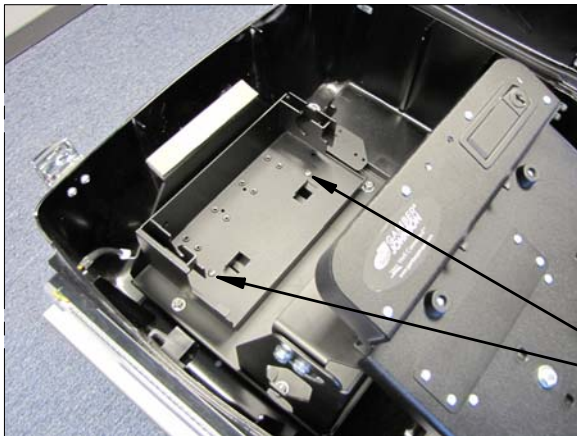


Fig 4 -
If the Brother PocketJet Printer Mount 7160-0035 is being used, attach it to the mount at this time using (2) #10-32 x .38 Phillips Pan Head Screws and (2) #10 Lock Washers supplied in the Printer Mount Hardware Bag.

(2) #10-32 x .38 Phillips Pan Head Screws & #10 Lock Washers



Fig 5 -
Insert the Computer and Printer.

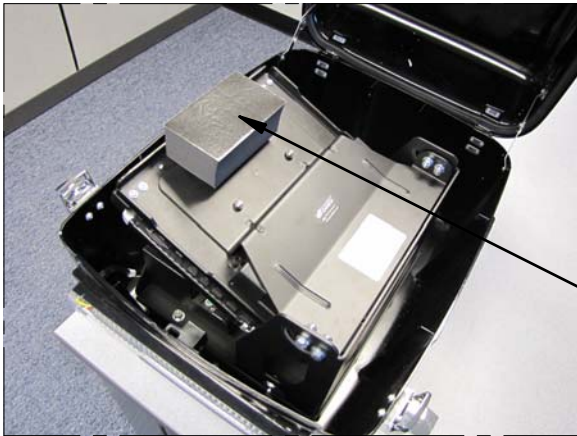


Fig 6 -
Fold the mount to the stowed position.
Remove the paper liner from the
Foam Block and position as shown
with the adhesive side up.

— Foam Block with adhesive side up



Fig 7 -
Carefully close the Tour-Pak Lid
without moving Foam Block.



Fig 8 -
Open Tour-Pak Lid and press
Foam Block in place.