



Very Well Connected™

INSTALLATION INSTRUCTIONS


Product
7110-1001

Revision
A

Form
INST-551

ARMEST, INTERNAL, DODGE CHARGER

Printing Spec: PS-001

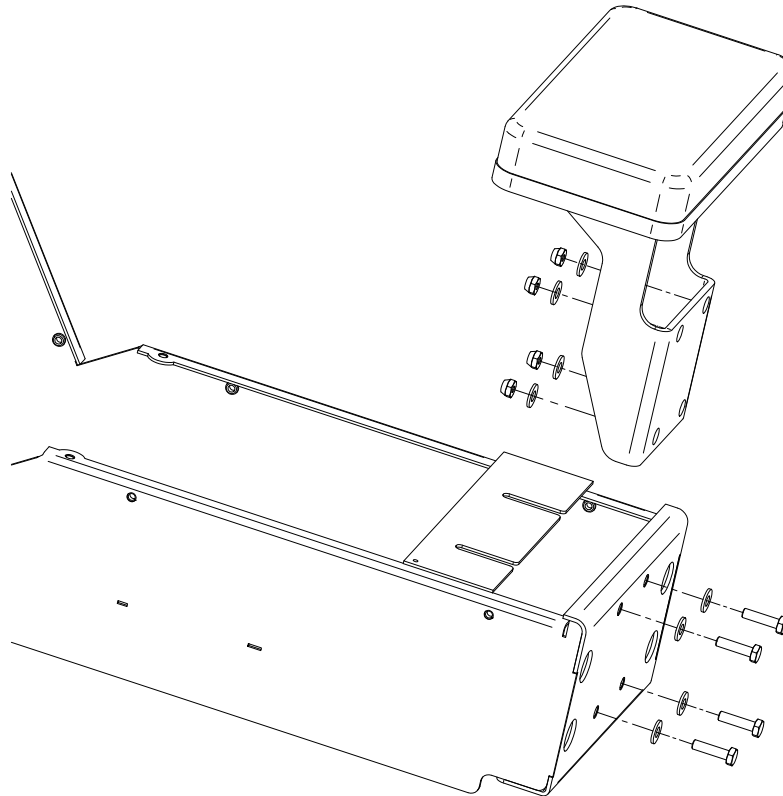

1. Install and tighten four (4) 1/4-20 x 1" bolts and washers to threaded inserts on rear of console box
2. Install armrest to inside of console box over bolts.
3. Attach armrest to console box using washers and 1/4-20 nuts.
4. Install Cover Plate to cover opening. Press down to firmly seat Dual Lock.

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© copyright 2011 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

