



INSTALLATION INSTRUCTIONS

Product

7160-1338, 7160-1411

2020+ Ford Utility Window Guard

Revision

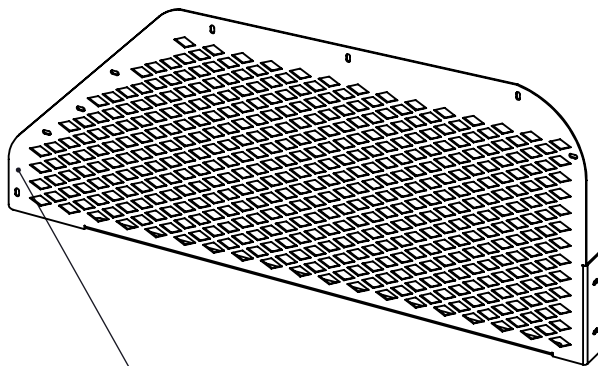
Rev A

Form

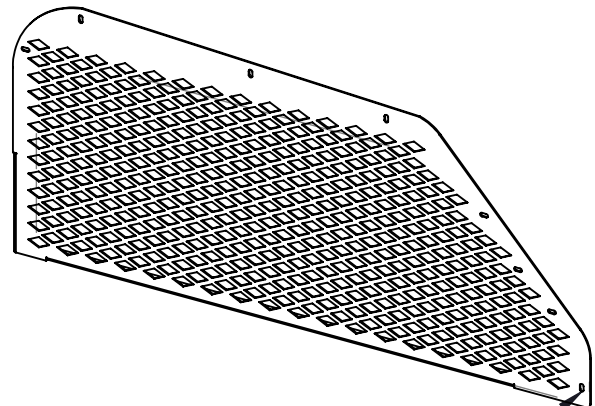
INST-924

Printing Spec: PS-001

1. Place the correct side guard on the door's window frame and position the unit so it matches the window frame profile. For window bar guards the round bars should be facing towards the window with the flush side facing inward. For mesh guards the flange should be pointed outward towards the window.
2. Mark the hole locations and drill for #10 x 1/2" sheetmetal screws provided in the hardware bag. Install the guard using the hardware provided.
3. Repeat for each side.

Driver Side Guard

Side Facing Inward

Passenger Side Guard**Mesh Window Guards Shown**

Mounting Holes

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 20XX Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868