



INSTALLATION INSTRUCTIONS

Product**7160-1233****TOYOTA CAB MOUNT - RH
OVERHEAD GUARD LEG****Revision**

Rev.A

Form

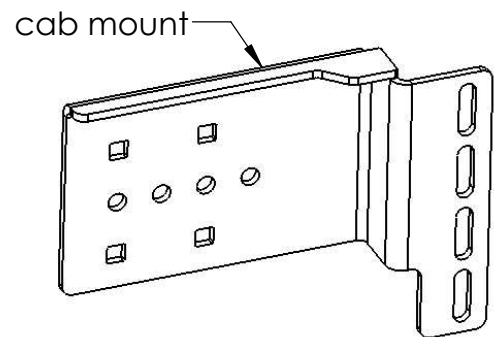
INST-849

Printing Spec:PS-001

The 7160-1233 Toyota cab mount is designed to attach to the right hand overhead guard leg, using the existing threaded inserts.

Attaching the cab mount:

1. Attach the cab mount to the right hand overhead guard leg using the 8MM hex bolts and washers supplied in the hardware bag. The mount attaches to the threaded inserts that are pre-installed from the factory.
2. The mounting plate has multiple slot locations for mounting to the overhead guard leg. Pick the mounting slots that work best for your particular application.
3. An optional material handling motion attachment (ie. 7160-0420 or 7160-0366) can now be added to the mount to hold the device being installed.

**Product Mounting Disclaimer**

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2017 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868