



# INSTALLATION INSTRUCTIONS

**Product**

7160-1407

Wire Cover - 2020+ FORD PI Utility (STD Console Box)


**Revision**

A

**Form**

INST-926

Printing Spec: PS-001

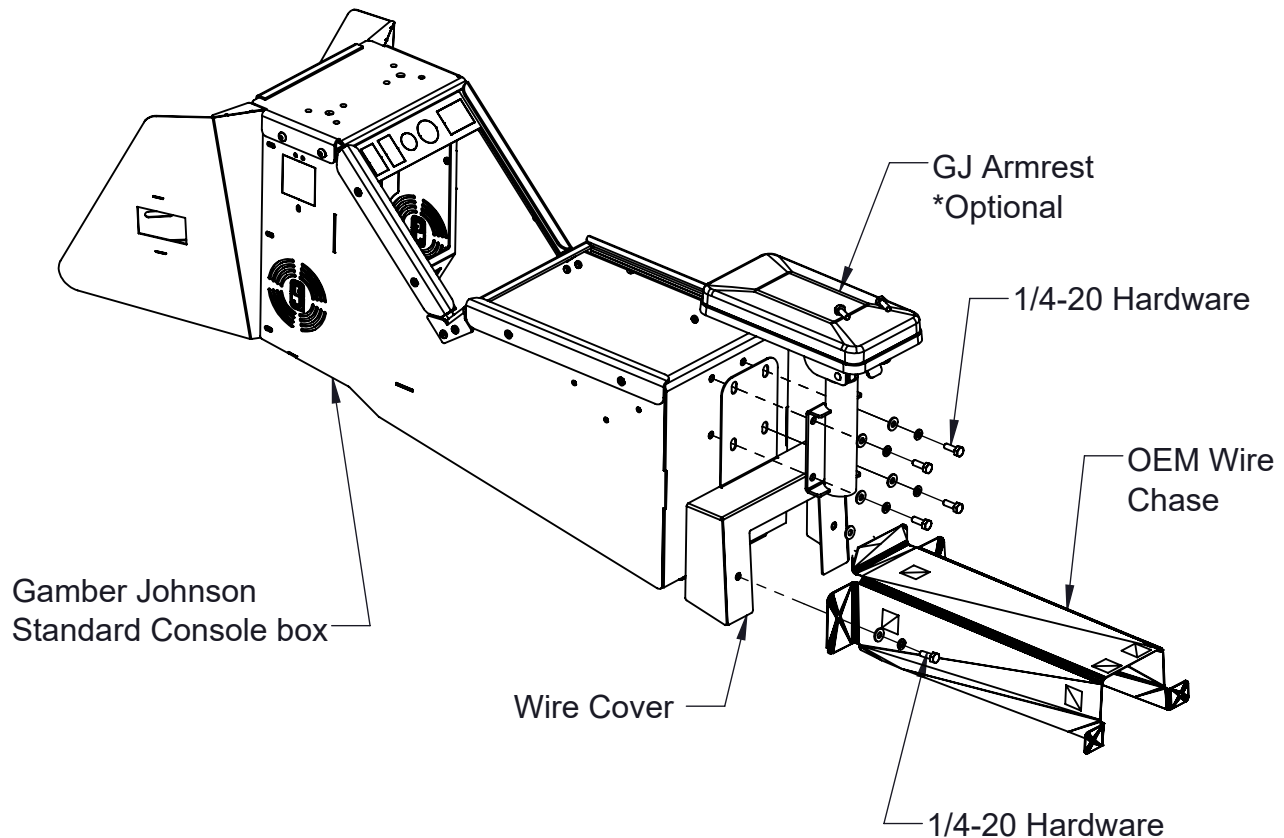

**To Install Wire Cover:**

1. Remove the OEM Center Console and replace with GJ Standard Console box.
2. Place the Wire Cover over the OEM Wire Chase and align the Bolt holes.
3. Use the 1/4-20 hardware provided to attache the OEM Wire Chase to the wire cover and the wire cover to the console box.

\*If the end user has the optional rear armrest, mount the wire cover between the console box and armrest.

**Product Mounting Disclaimer**

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 20XX Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868