

INSTALLATION INSTRUCTIONS

Product 7160-0008 VEHICLE BASE Revision


Form

Rev B

DODGE CHARGER (2007-2010) DODGE MAGNUM (2007-2008)

Printing Spec: PS-001

The purpose of this instruction sheet is to illustrate the manufacturer's recommended method of installation of the Dodge Charger Vehicle Base (7160-0008). This product is a simple solution that requires no drilling into the vehicle. It is necessary to replace the seat bolts found on the foremost anchor points of the front passenger's seat with those that are supplied in harware bag 7120-0377.

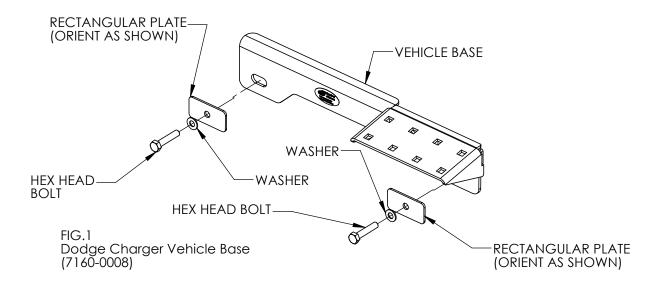

- 1. Begin by removing the front seatbolts of the front passenger's seat.
- 2.Place the Vehicle Base in front of the bolt holes of the seat leas (see FIG.1)
- 3.Insert the two M10 X 50mm (1.50") Hex Head Bolts into the Washers and Rectangular Plates included in hardware bag 7120-0377 (see FIG.1). Ensure that the Rectangular Plate is oriented as shown in FIG.1
- 4. When the bolts are firmly tightened, the installation of the Dodge Charger Vehicle Base will be complete. Add mounting system components as desired.

CAUTION: Installing this base into the 2006 Dodge Charger/Magnum will compromise the vehicle airbag safety system, possibly endangering vehicle occupants. Seat bolts in 2006 vehicles are tied into the airbag sensor systems. Loosening or removal of seat bolts in the 2006 vehicles will require recalibration and must be performed by a certified Daimler Chrysler service technician.

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.