



# INSTALLATION INSTRUCTIONS

**Product**

7160-1346  
7160-1346-01

**Revision**

A

**Form**

INST-967

2020+ FORD PI Utility On-Dash Mount

Printing Spec: PS-001



- You must read and follow all of these installation instructions. Failure to follow the installation instructions may result in serious bodily injury or death
- DO NOT install or use this assembly in the area in which the airbag on the vehicle may be deployed. The installer and user of this assembly are responsible for installing and using this assembly outside the area in which an airbag may be deployed. (See Product Mounting Disclaimer Below)
- If the installation of the equipment requires that the equipment (or any additional equipment that is added to the installation) be placed in front of an airbag, the airbag should be deactivated. In order to secure permission for deactivating the airbag you must contact the National Highway Traffic Safety Administration at 1-800-424-9393 to gain permission to do so. If you have any questions or need assistance, call Gamber-Johnson at 1-800-456-6868.
- High speed vehicle turns may cause parts of the assembly to swivel, interfering with the driver or other equipment.
- Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product.
- Additional copies of the installation instruction can be obtained from Gamber-Johnson. If you need assistance or have any questions, go to [www.gamberjohnson.com](http://www.gamberjohnson.com) or call Gamber-Johnson at 1-800-456-6868.
- DO NOT remove the warning label from the product under any circumstances.

**Product Mounting Disclaimer**

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufacturers specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2020 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

## Installing On-Dash:

1. Use 7MM socket to remove the 2 OEM bolts holding down the top Tray (Do not remove the Tray).




2. Place the GJ top tray inside the FORD OEM tray and reinstall with the OEM bolts.



3. With the GJ top plate installed, install the middle vertical section of the On-Dash Mount with provided 3/8 Hardware.



4. Attach the legs of the On-Dash to the top plate of the GJ Low-Profile Console as shown with 1/4 Allen head bolts provided, then attached the upper part of the legs to the vertical section of the On-Dash mount.

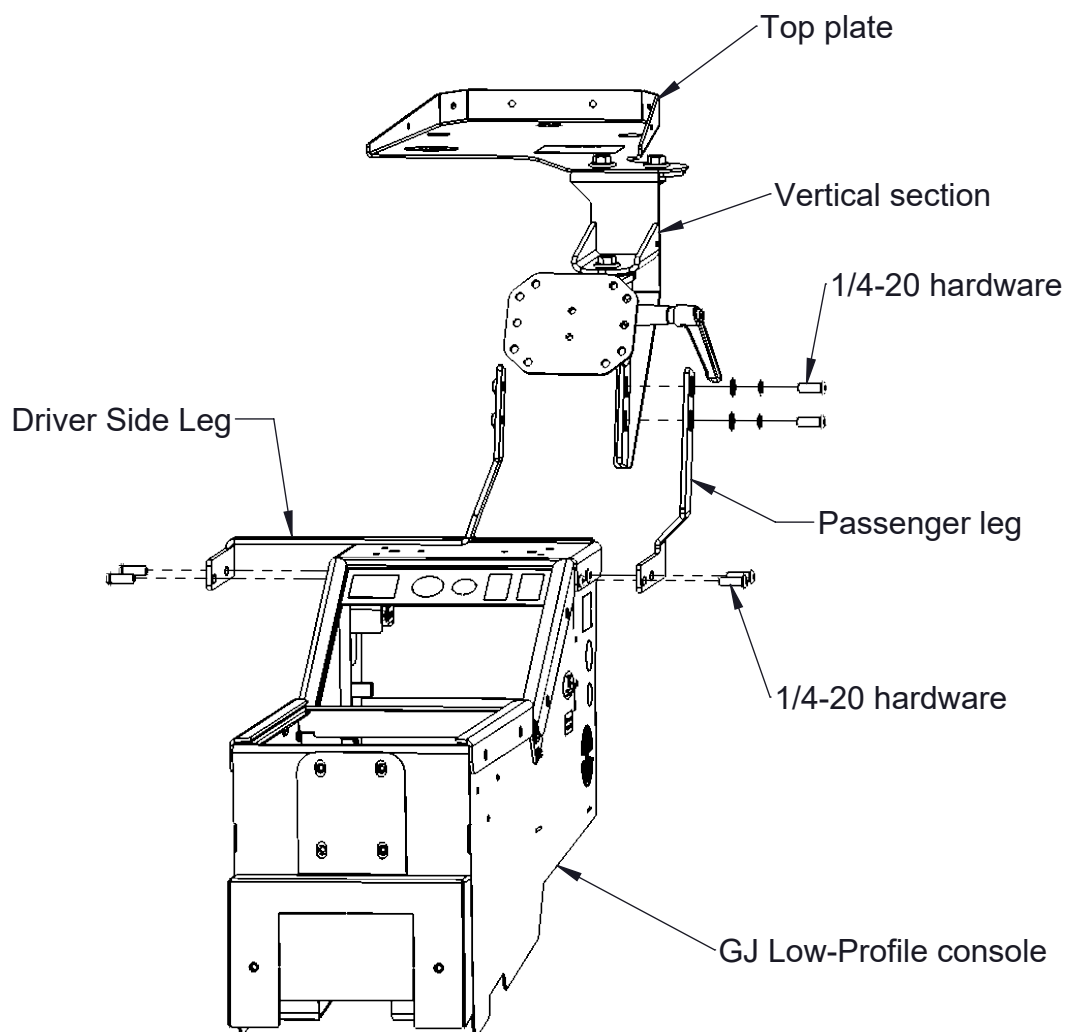

Optional equipment and Feature:

