



INSTALLATION INSTRUCTIONS

Product

7160-0368, 7160-0585, 7160-0586

OVERHEAD GUARD MOUNT

Revision

Rev A

Form

INST-968


Printing Spec: PS-001

This instruction sheet is for mounting the overhead guard mounts listed above. For the device being attached to the overhead guard mount, see their specific instruction sheets.

7160-0368 is shown for reference.

Attaching the mount:

1. Attach the mount to the overhead guard bars with the back plate and 3/8" dia. carriage bolts and flange nuts provided in hardware bag 7120-0557.
2. Position the 3/8" carriage bolts to the outside and as close to the bars as possible. Tighten the nuts to hold the mount in place.
3. Attach the device being mounted (i.e. computer or docking station) to the clevis with the hardware supplied with the device.

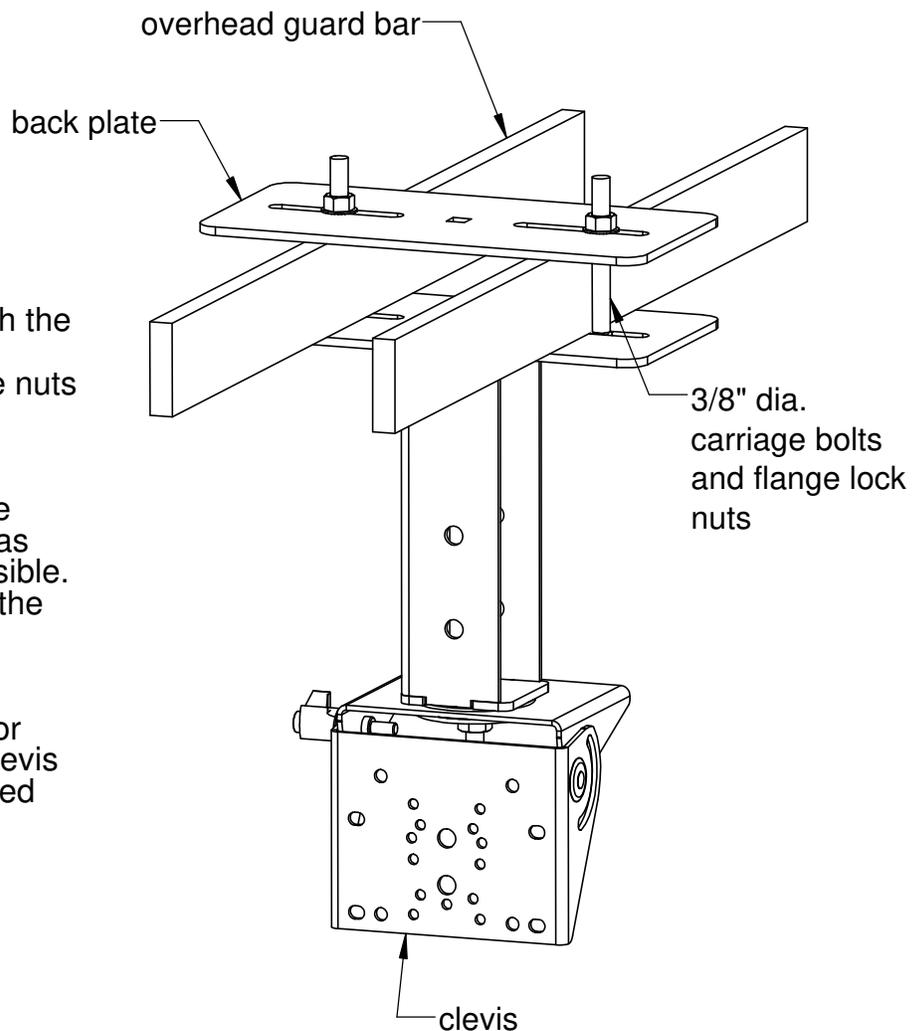

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2020 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868