

INSTALLATION INSTRUCTIONS

Product

14422
DODGE CHARGER FILLER PANEL


Revision

Rev.A

Form

INST-538

Printing Spec: PS-001

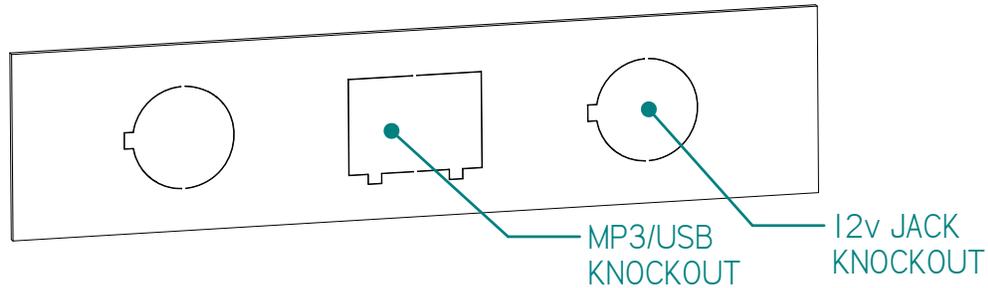

12v jacks:

1. Remove a 12v jack from the console by pressing the jack through from behind.
2. Separate the cap and ring from the 12v jack by depressing the tabs inside the jack (Figure 1) then pressing the metal sleeve out of the plastic ring.
3. Remove the knockout from the filler panel
4. Install the ring and cap into the filler panel. Note orientation of notch.
5. Install the 12v jack into the ring.
6. Repeat for second 12v jack if desired.



FIGURE 1



CAP AND RING

USB/MP3 Jack:

1. Remove USB/MP3 box from factory console by depressing tabs on either side.
2. Remove the square knockout from filler panel.
3. Snap the USB/MP3 box into the opening in the filler panel.

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© copyright 2010 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868