


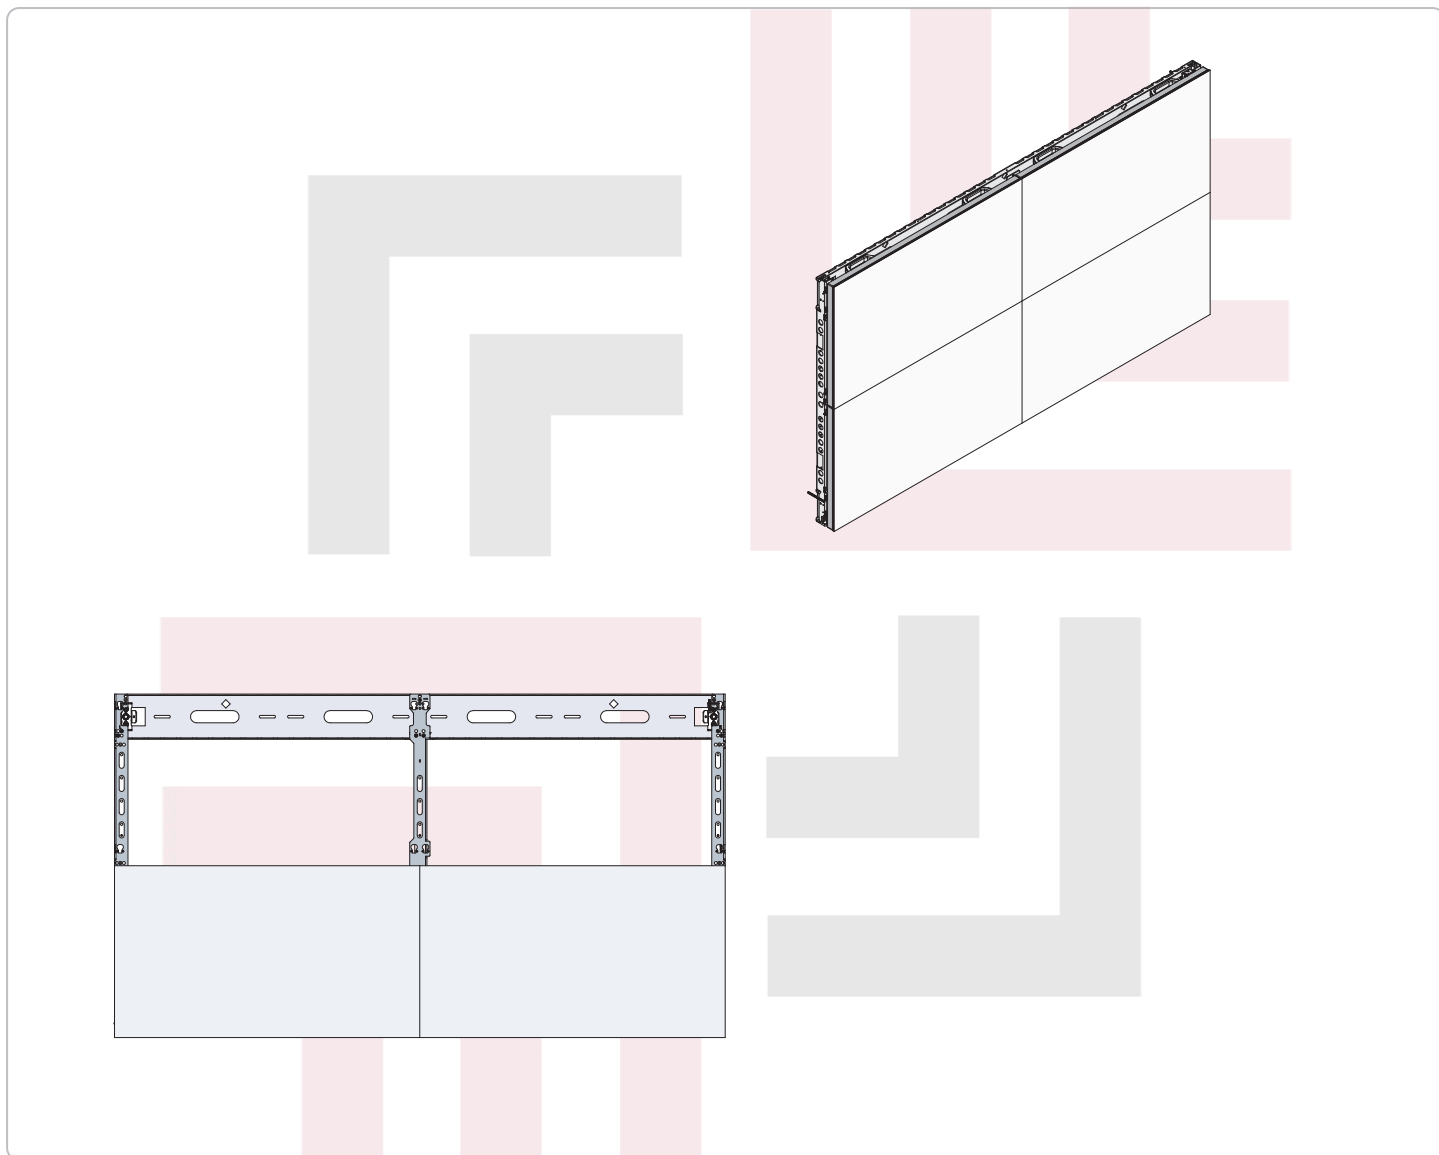

**SERIES: SAM-IER
INSTALLATION GUIDE**


Convergent Series Video Wall Mount
For Samsung IER LED Cabinets



CAUTION STATEMENTS

1. READ ALL STEPS WITHIN THIS MANUAL BEFORE INSTALLING THE MOUNT. **SAMSUNG IER LED SERIES INSTALLATION GUIDE** MUST BE READ IN CONJUNCTION FOR SUCCESSFUL INSTALLATION. ANY QUESTIONS? CALL PREMIER MOUNTS.
2. INSTALLATION MUST MEETS THE REQUIREMENTS APPROVED BY THE STRUCTURAL ENGINEER.
3. FRAME MUST BE PLUMBED, SQUARED, LEVELED, X, Y, AND Z ALIGNED PRIOR TO INSTALLATION OF ANY DISPLAYS.
4. ALL LED CABINETS MUST BE **POWER ON TESTED** PRIOR TO ANY INSTALLATION.
5. PREMIER MOUNTS RECOMMENDS THE HANDLING LED CABINETS BY AN INDUSTRY QUALIFIED PROFESSIONAL.
6. PREMIER MOUNTS IS NOT RESPONSIBLE FOR DEFECTS, MISUSE, OR IMPROPER HANDLING OF THE LED CABINETS.

Tools for Installation:

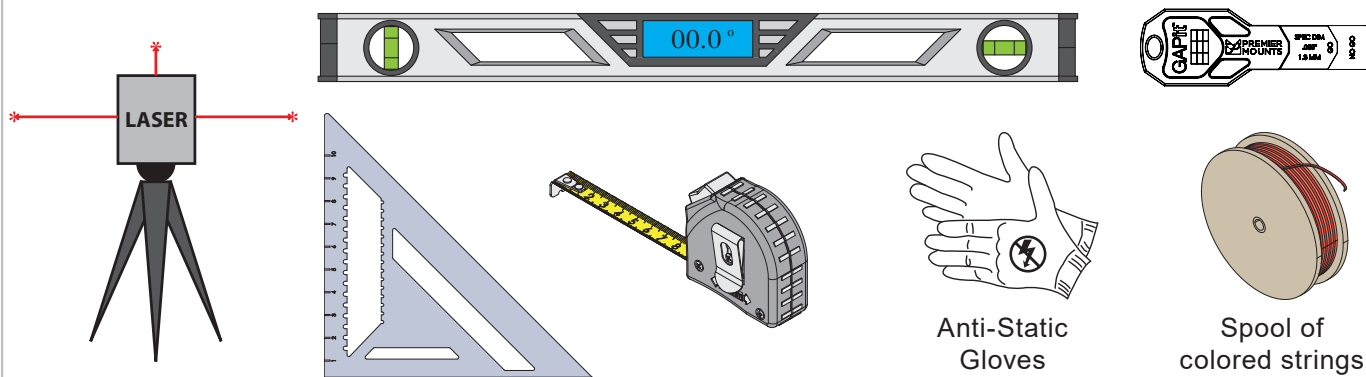

WALL REQUIREMENTS:

Solid or continuous plywood backing with a **min of 3/4" thickness**, sound and secured to handle the total combined weight of the mount and LED cabinets.


MAX FLATNESS ADJUSTMENT

±1/2" or 1" max adjustment range for flatness of wall, over the entire wall surface

MAX POST-LEVEL ADJUSTMENT

±1/4" Post-level adjustment from each mounting point

VIDEO WALL DIMENSIONS AND MOUNTING LOCATIONS

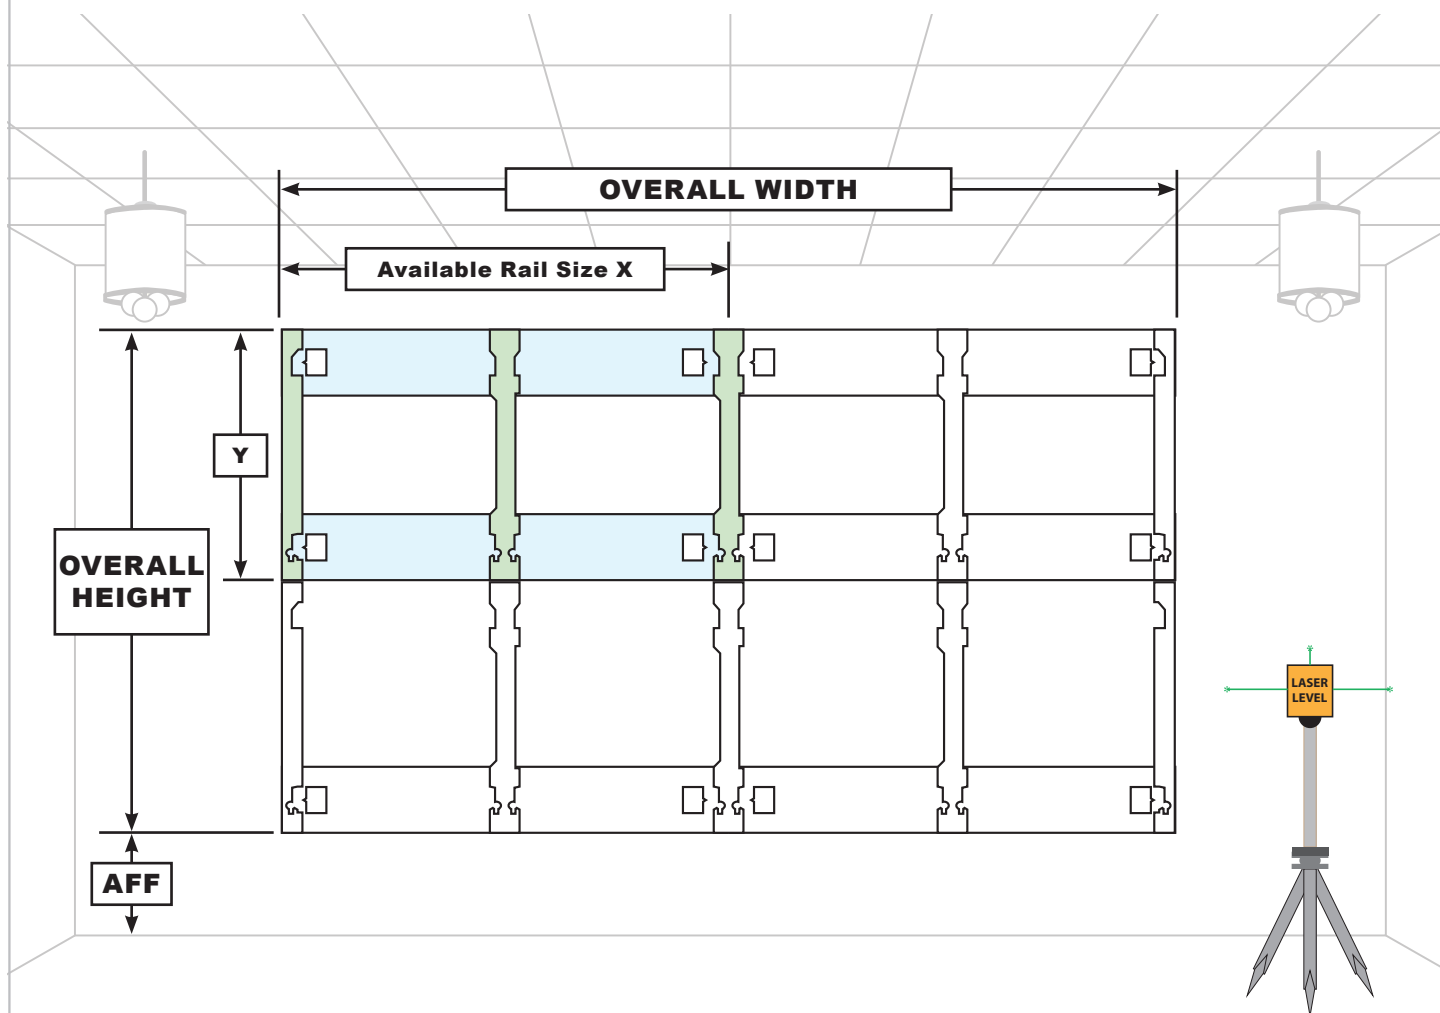

| | Available Size | Imperial (Inches) | Metric (Millimeters) |
|----------|----------------|-------------------|----------------------|
| X | 1 Wide | 37.77 | 959.4 |
| | 2 Wide | 75.56 | 1919.2 |
| Y | 1 High | 21.23 | 539.3 |
| | 2 High | 42.49 | 1079.3 |
| | 3 High | 63.75 | 1619.3 |

The overall dimensions of any video wall array can be calculated by using the table within this page.

The desired array size is a **combination** of available sizes. Add the available sizes together to find the overall width or height of a given array.


For modular configuration, any combination of the rails does not affect the overall dimension of the mount.

Example: an 4X4 is 75.56" x 84.98", and 8X8 is 151.12" x 169.96".


CONVERGENT - SAMSUNG IER Installation Guide

| ITEM #. | PART NO. | DESCRIPTION |
|---------|-----------------|----------------------------|
| 1 | 4000-300-701-LX | Horizontal Rail 1H |
| 2 | 4000-300-702-LX | Horizontal Rail 2H |
| 3 | 4000-300-711-LX | Vertical Left End Rail 1V |
| 4 | 4000-300-712-LX | Vertical Center Rail 1V |
| 5 | 4000-300-713-LX | Vertical Right End Rail 1V |
| 6 | 4000-300-721-LX | Vertical Left End Rail 2V |
| 7 | 4000-300-722-LX | Vertical Center Rail 2V |
| 8 | 4000-300-723-LX | Vertical Right End Rail 2V |
| 9 | 4000-300-731-LX | Vertical Left End Rail 3V |
| 10 | 4000-300-732-LX | Vertical Center Rail 3V |
| 11 | 4000-300-733-LX | Vertical Right End Rail 3V |


1 HIGH

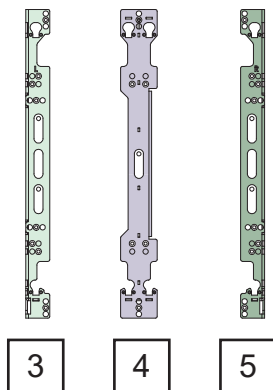

2 HIGH

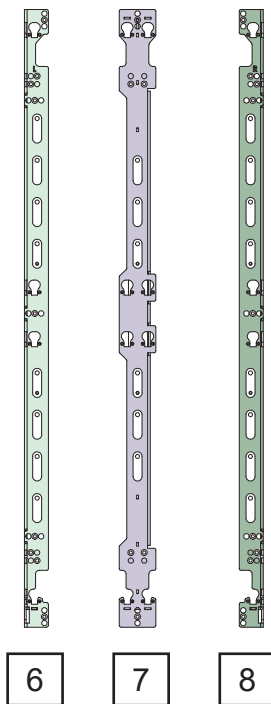


3 HIGH

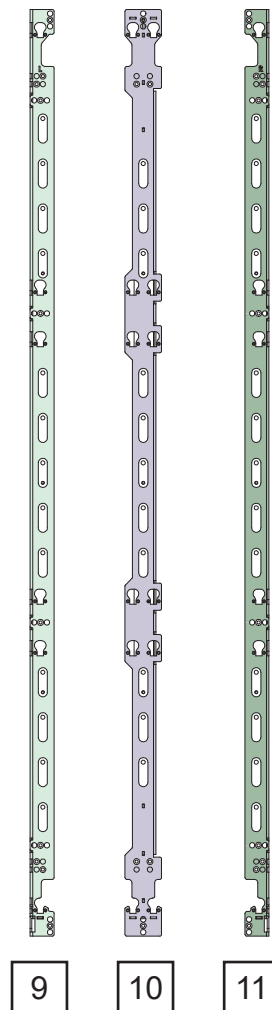


AVAILABLE SIZES

1 WIDE




2 WIDE




PRE-INSTALLATION


Floating Adjustment Assembly (or “Floaters”)

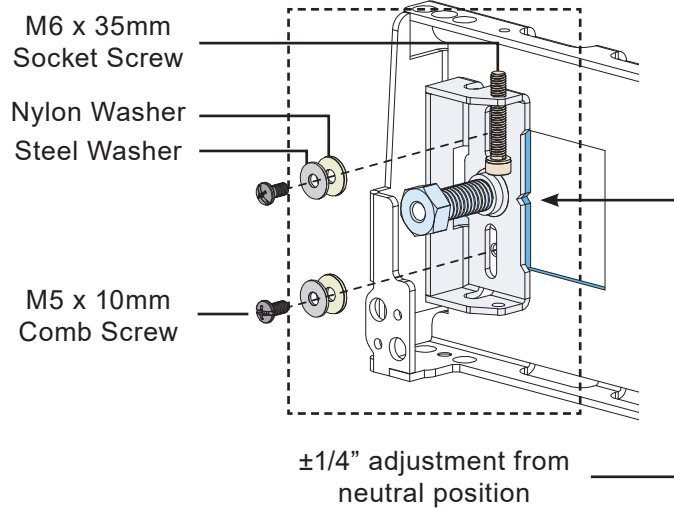

Handles needs to be
remove from the LED
cabinets

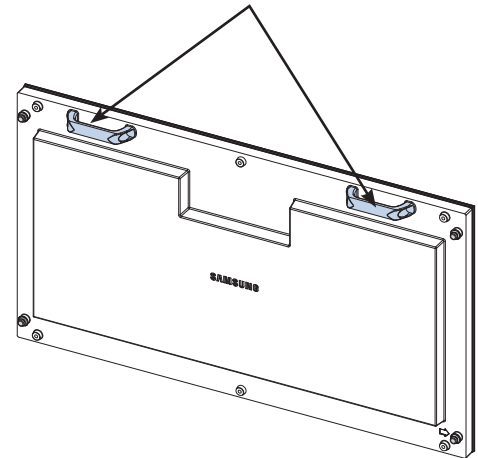


1. Assemble the floating adjustment assemble shown above at every mounting point location, indicated by the rectangular v-groove cutout.
2. Loosely fasten the M6 x 35mm Socket Head to the bracket. The tip of the screw should **NOT** touch the surface of the horizontal bracket to allow adjustments at post installation.

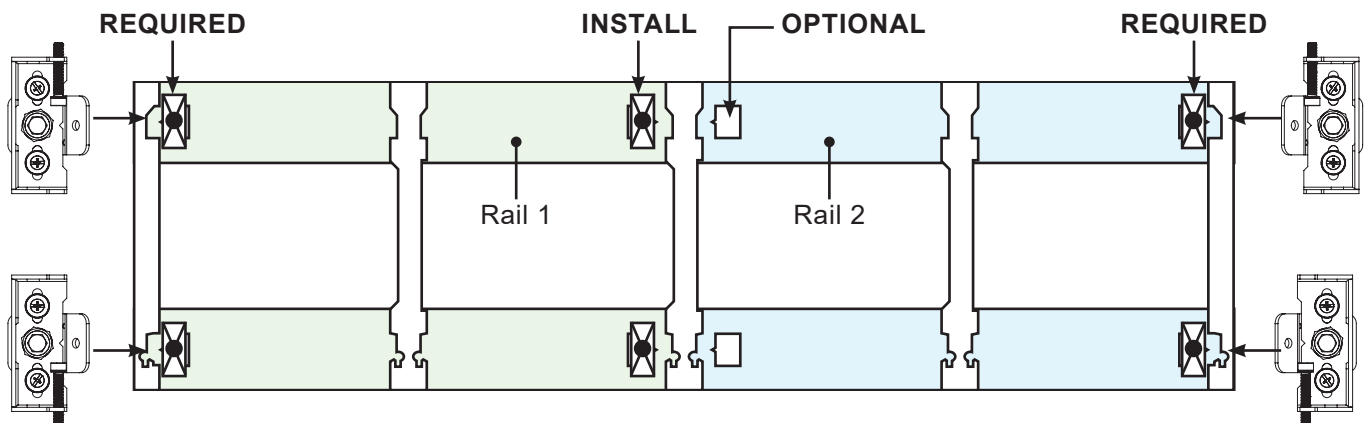

Floaters must be install on every end of each Horizontal Rail brackets. If another rail brackets are used to extend the horizontal width, only one floater is required in the middle on either side. Both side can be used if neccessary.

1

ASSEMBLE THE FRAME

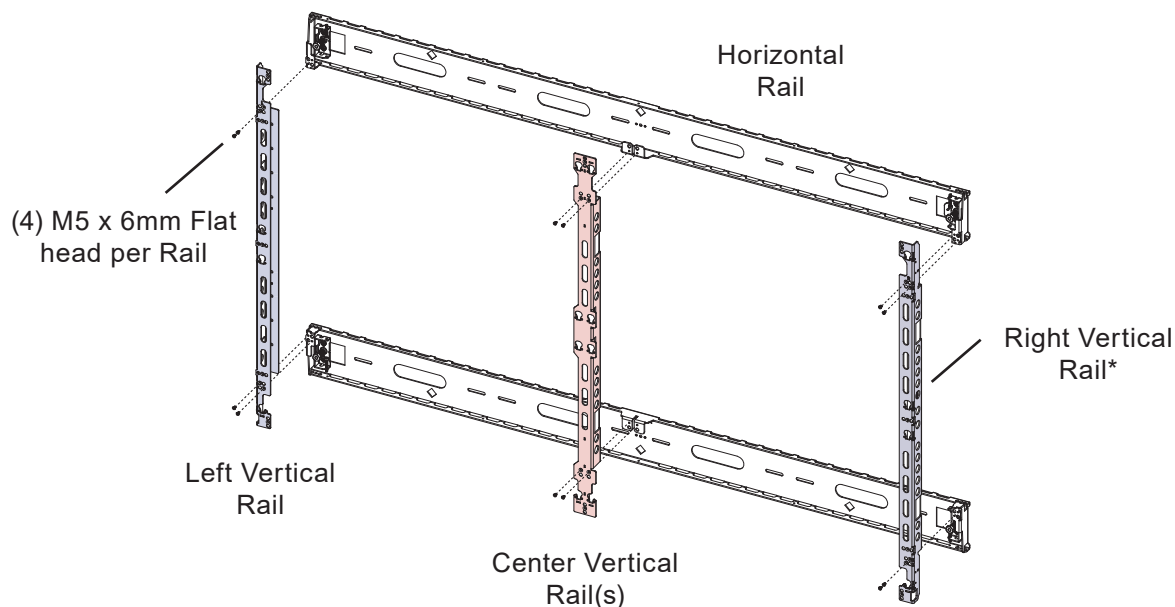


All video wall array uses a pair of left and right vertical brackets with the middle "center" bracket(s) in between (except for 1 wide narrowest video wall array).

2

MOUNTING SURFACE INFORMATION


WALL REQUIREMENT:

A solid or continuous plywood backing wall with min. of 3/4" thickness.

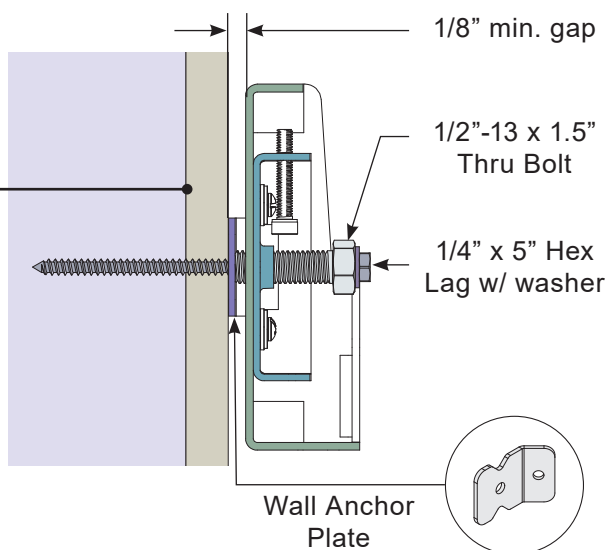

3

1. Install a few support screws to hold the mount roughly near the desired location.
2. Place a level on top of the mount and readjust the support screws if necessary.
3. Secure the first mounting location by sliding a Wall Anchor Plate behind the mount and fasten using 1/4" x 5" Hex Lag and 1/4" Washer.
4. Maintain a 1/8" minimum gap from the anchor plate and rail bracket when anchoring.
5. Install the remaining upper mounting locations while keeping the mount leveled.

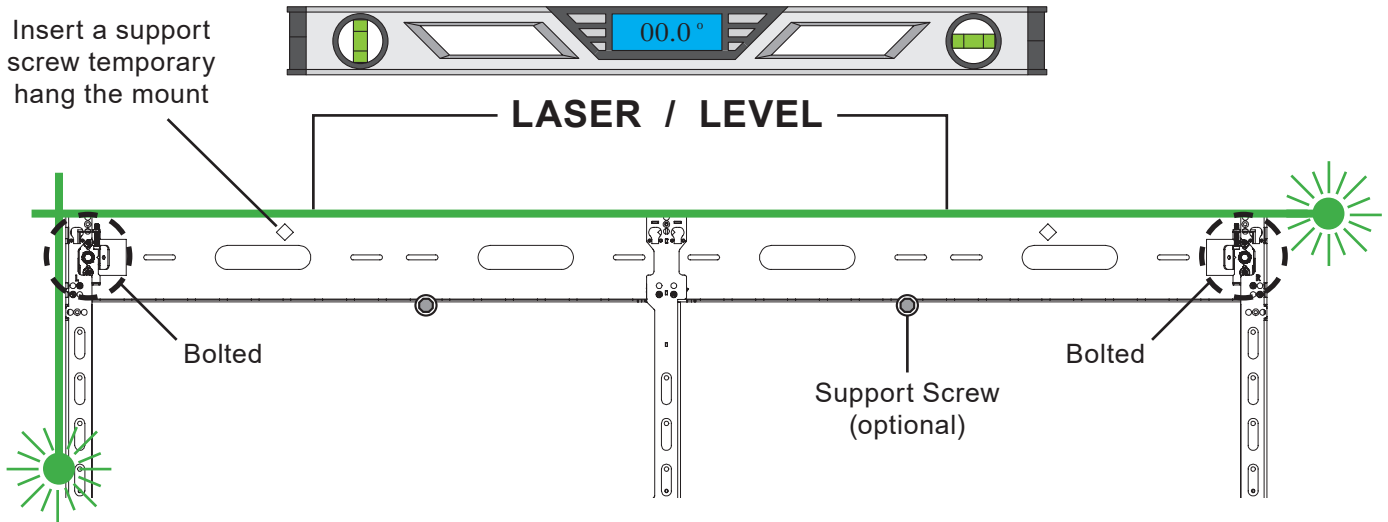


4

Install a few support screws (commercially available hardware) to **temporary** hold the lower portion of the mount. Do not bolt the frame at circled mounting point location. Adjust or nudge the frame left or right until the mount is squared.



Installation is not finished within this step. The frame must be fully squared and leveled prior to final mounting location. See step 9-10 for additional detail.

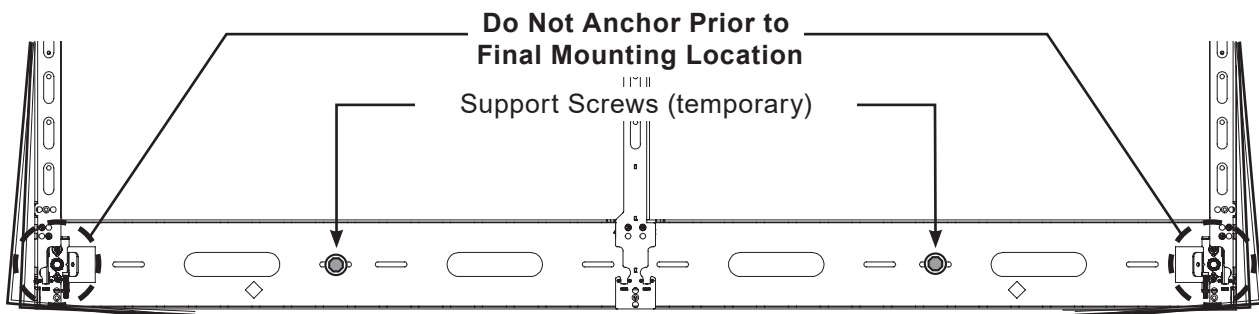

Multiple Unit Configuration



5

Extend Horizontally

To extend the width of the unit, follow the steps below.




1. Hang and position the second Horizontal Rail side by side.
2. Place a support screw while maintaining a leveled horizontal rail to temporary hold in place.
3. Install (2) Attachment Plate and fasten together using (4) 10-32 x 3/8" Flat Head Screw for each rail.
4. Install the remaining Vertical Rails (center) using (4) 10-32 x 3/8 Flat Head Screw.
5. Install the lower section of the mount as the steps above.

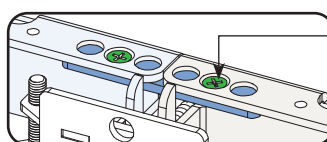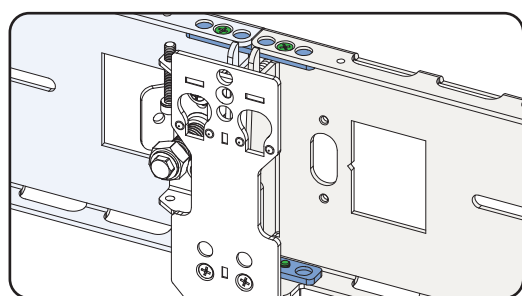


(4) 10-32 x 3/8"
Flat Head Screw

(2) Attachment
Plate

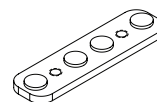

the seam between
two units

LASER / LEVEL

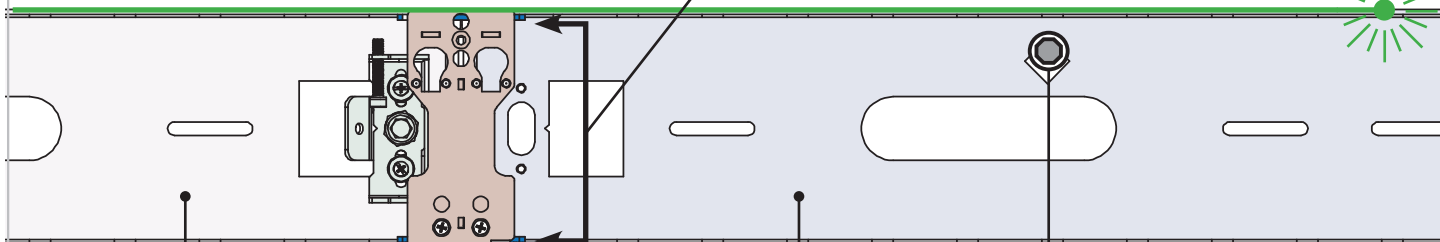


Horizontal Rail
(1st unit)

Horizontal Rail
(2nd unit)

Support
Screw

Vertical Rail
(center)

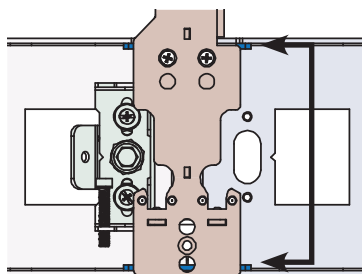


Multiple Unit Configuration



6

Extend Vertically


To extend the height of the unit, follow the steps below.

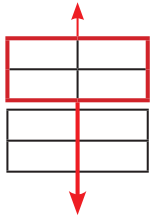

1. Place the rail brackets directly above or below the another rail brackets as shown.
2. Use the Attachment Plates to unite the two rail brackets together. Fasten using (2) 10-32 x 3/8" Flat Head Screw per.
3. Between the two units, only a single row of horizontal rail brackets are used for standard application.

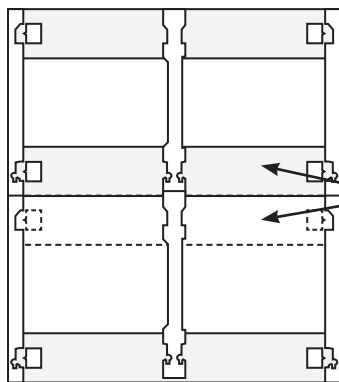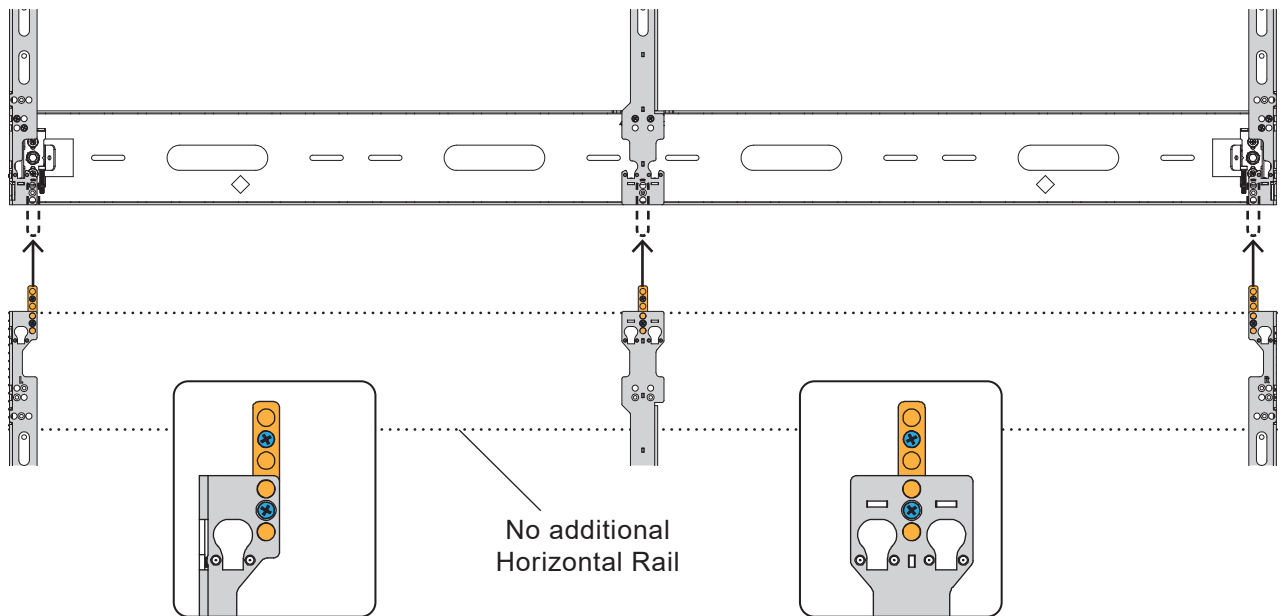

One row of horizontal rail brackets on either side for standard (non-mosaic) application.

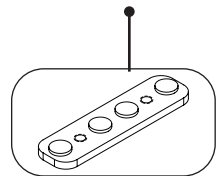


SQUARE AND LEVEL

7





Inspect each bracket using a Square and Level tool.

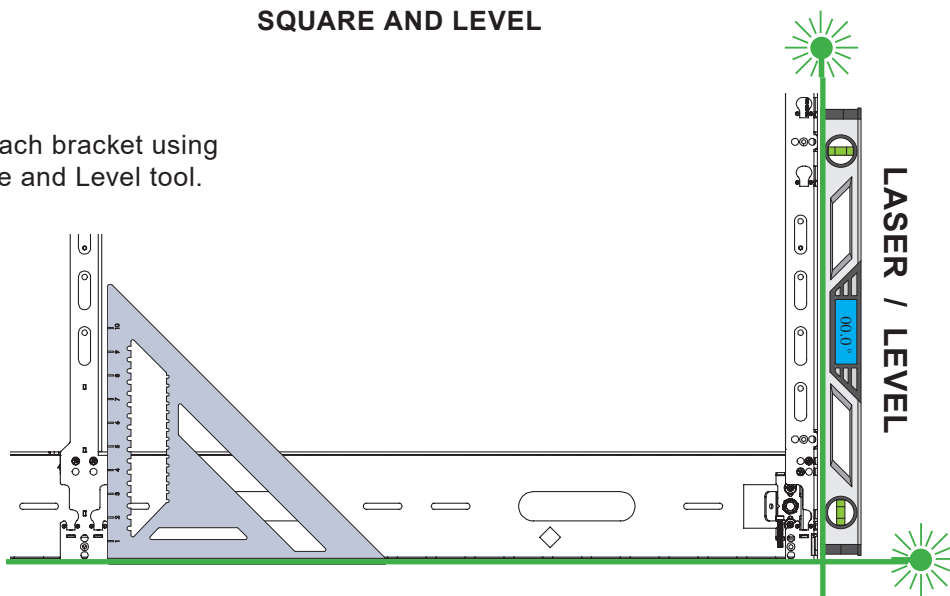


FINETUNE THE RAIL FOR FLATNESS

8


1. Install wherever possible.
2. Use drywall or wood screws to pull the brackets towards the wall.
3. Use supplied M5 x 40mm Pan screw to push the brackets against the wall.

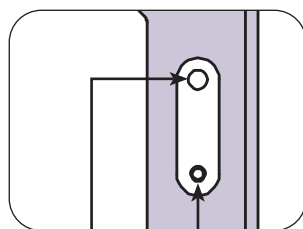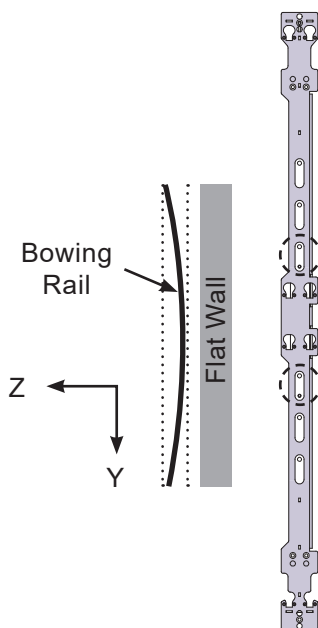

Ø 0.28" hole
M5 x 0.8mm
tapped hole

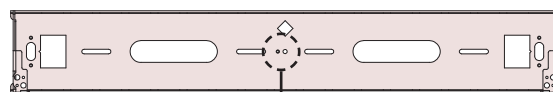

Finetuning holes for reference

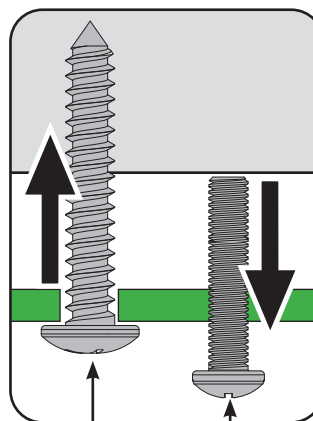


Towards
the wall

Against
the wall

Notes: Finetuning holes available at various location for all rail brackets. Brackets shown for reference only.

9

VERY IMPORTANT! VERIFYING THE DIAGONAL MEASUREMENTS FOR SQUARENESS


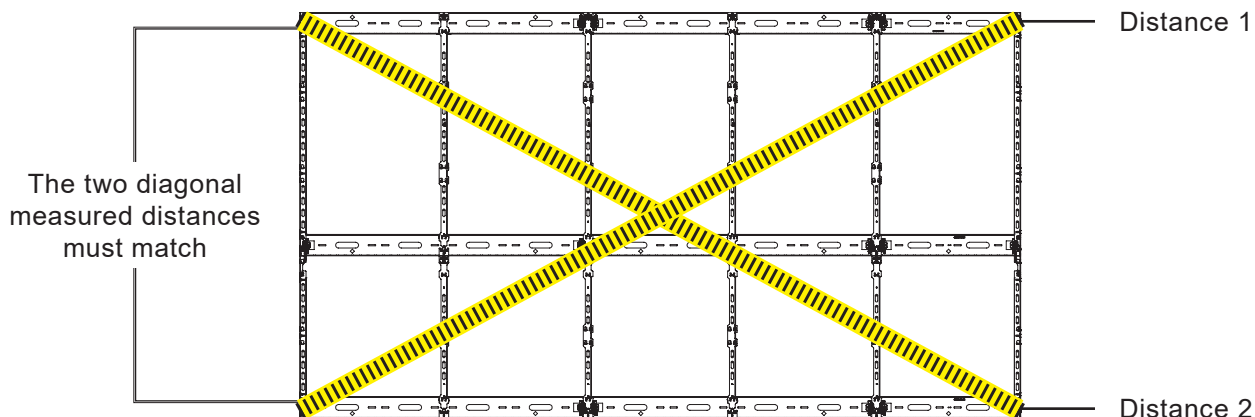


1. Measure the distance from corner to corner with a measuring tape.
2. Measure diagonally opposite and verify the diagonal measurements.
3. Proceed only if the two measurements are equivalent.

10

BOLT THE LOWER MOUNTING POINT


Secure the lower mounting location by sliding a Wall Anchor Plate behind the mount and bolt using 1/4" x 5" Hex Lag with 1/4" Washer.

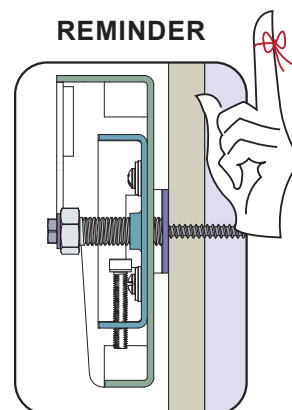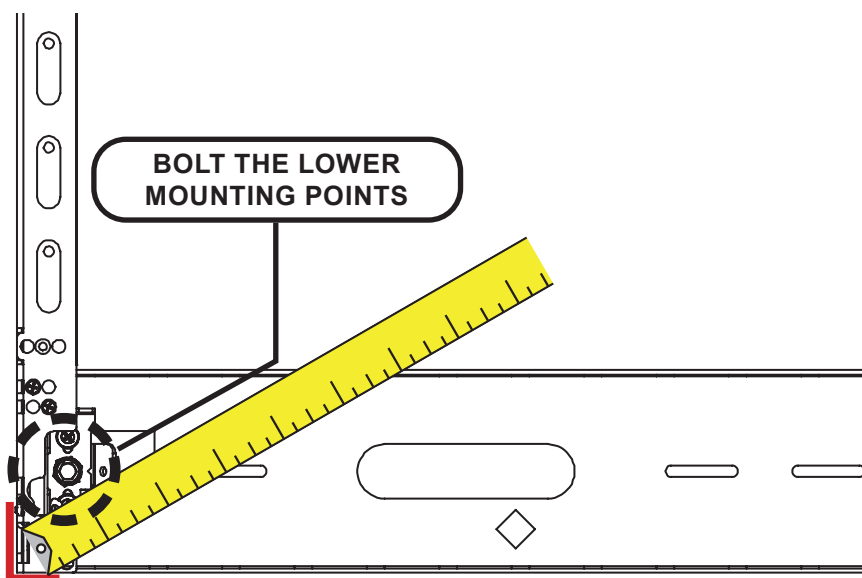

11


VERIFYING THE MOUNT FOR FLATNESS

1. Tie a string from one end to the other end of the entire array.
2. Tie horizontally and crisscross, especially for large video wall array.
3. Inspect for any gaps between the brackets and the string.
4. Adjust any necessary mounting location.

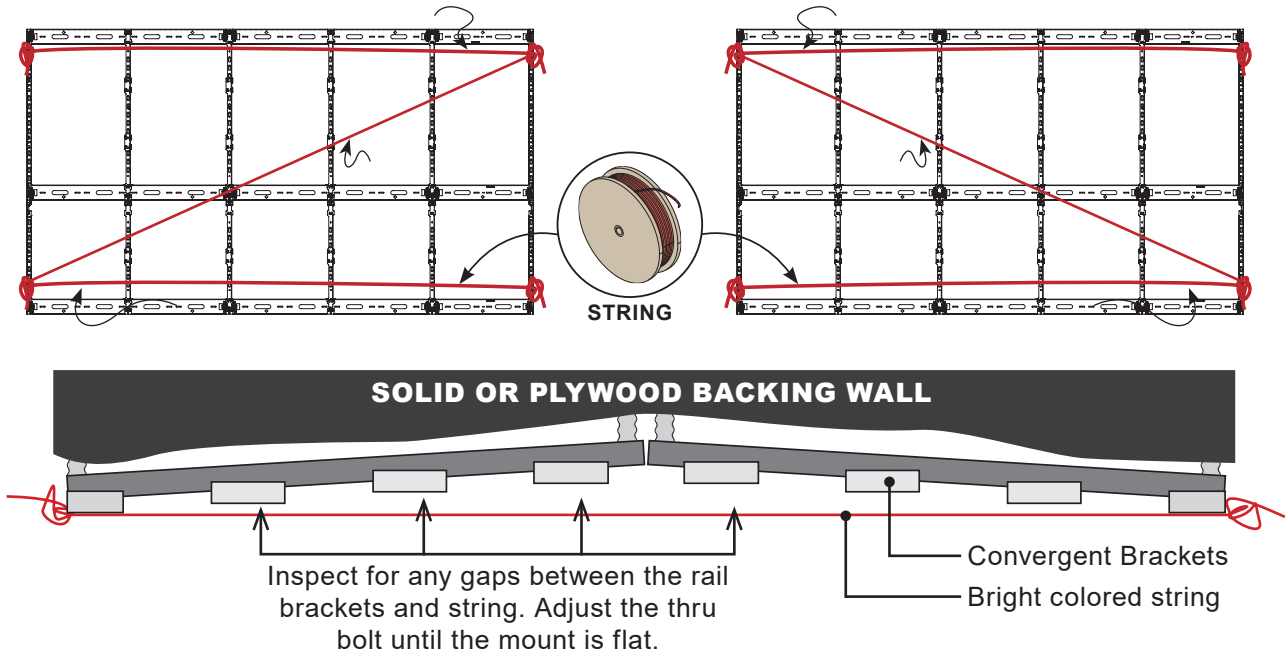


12

FLATNESS AND POST-LEVEL ADJUSTMENT

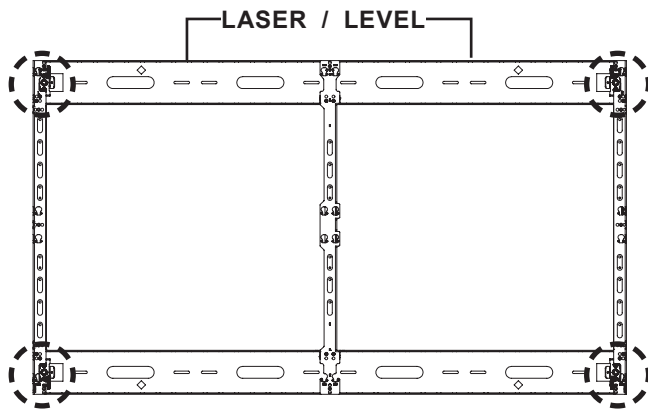

$\pm 1/2"$ or 1" max adjustment range
for **flatness**.

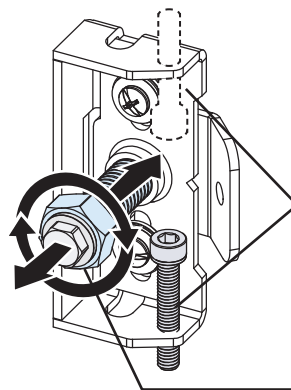

Adjust the level by
loosen or tighten the
screw located on either
the top **OR** bottom
corner location of the
mount.


$\pm 1/4"$ **post-level** adjustment from
each mounting point.

13

USE ADDITIONAL MOUNTING SLOT TO SECURE THE FRAME






NOTES: If using the additional slots for mounting points, make sure that the floating frame is fully level to the wall vertically and horizontally. Must use shims (commercially available) on every slots being used to fill the void between the wall and the frame. Avoid over tightening the screws as this would make the floating frame uneven.

FILL VOIDS WITH SHIMS

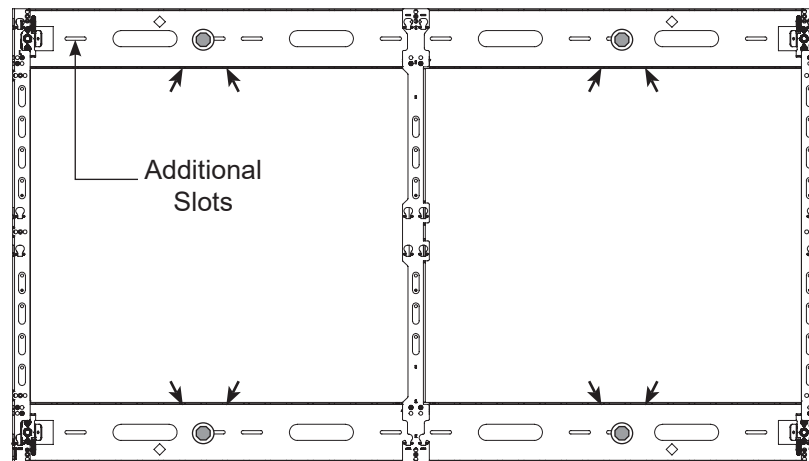

14


Insert multiple M5 x 0.5 x 10mm Cup Point Set Screws on the left, right, and bottom side of the mount. Adjust the LED Cabinets in sequential steps.

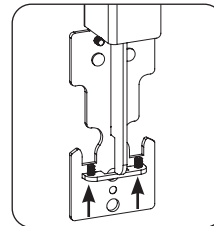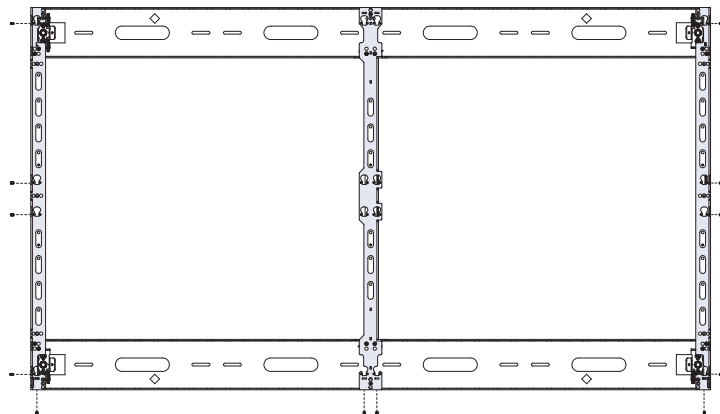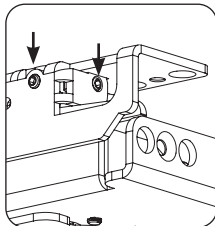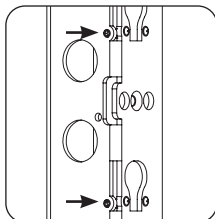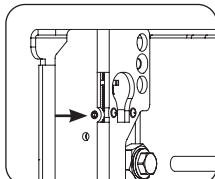


15

SAMSUNG IER LED DISPLAY INSTALLATION MANUAL must be read in conjunction with the recommended steps below. LED Cabinets to be handled by industry qualified professional. Improper installation may cause damage to the LEDs.


1. Install the first LED cabinet from the center bottom row of the mount.
2. Position the cabinet into the keyhole slot and slowly lower the cabinet.
3. Install adjacent or sequential cabinets and expand outward.
4. Finetune the cabinets by **adjusting the set screws** located on the left, right, and bottom side of the mount.

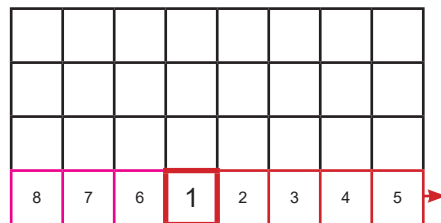

Example: 8X4 Array

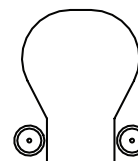

Keyhole Slot

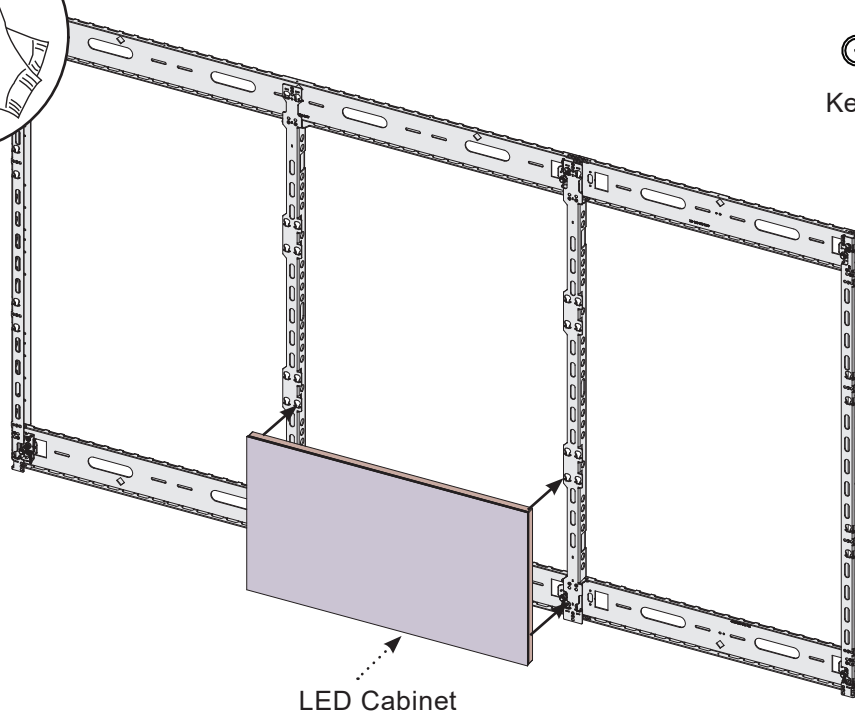

LED Cabinet

3 Wide by 3 High Video Wall, shown for clarity.