


PP-HDFCP

Installation Guide

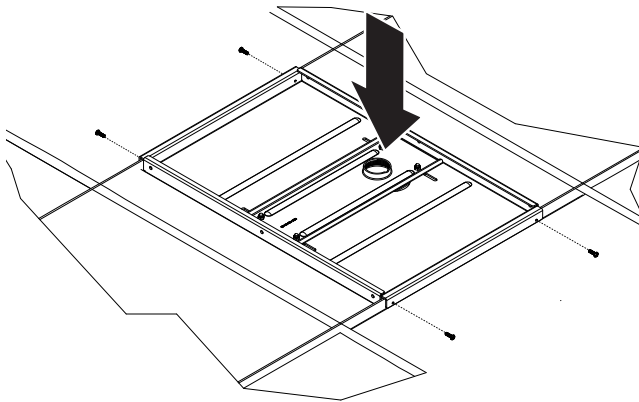

1



Tighten the four (4) pre-installed M5 x 16 screws

2


Wood Stud



1/4" x 3" Eye Lag Screw





Solid Surface




M6 x 2.4 Eye Lag Anchors



Truss Ceiling

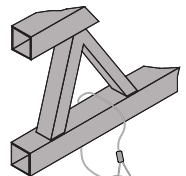


3

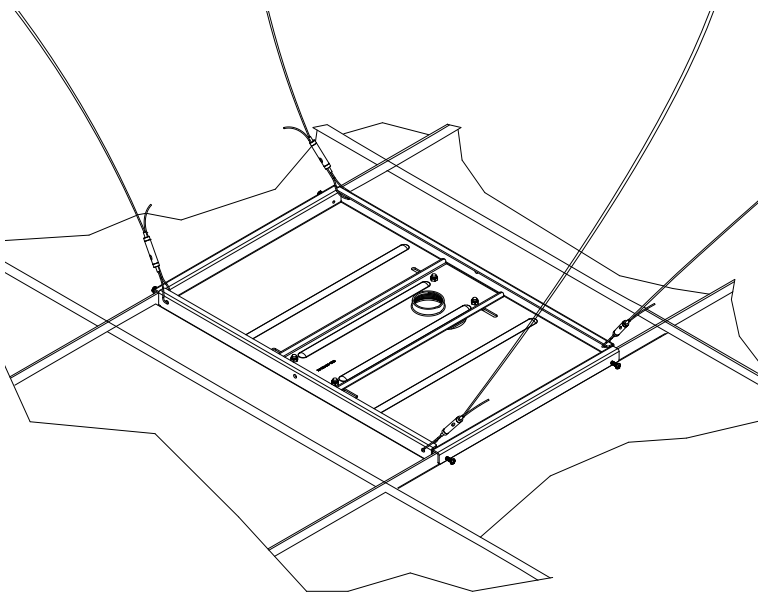


1



2




3

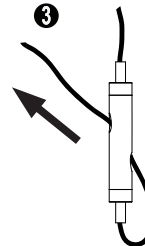

PP-HDFCP


Installation Guide

Lateral Shift Adjustment

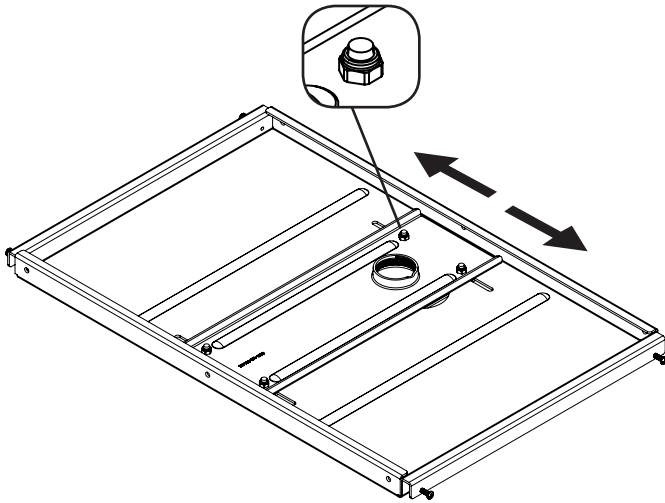


Loosen the four (4) M6 Nylon Lock Nut to make adjustments.

Cutting the Access Hole

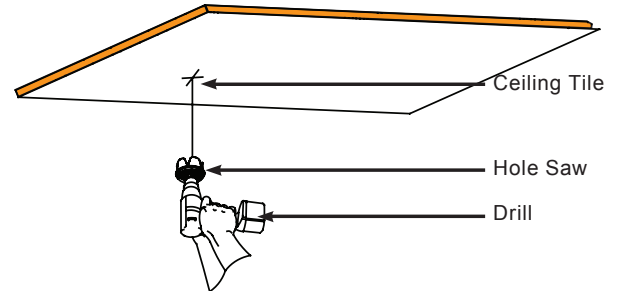

Optional Pipe

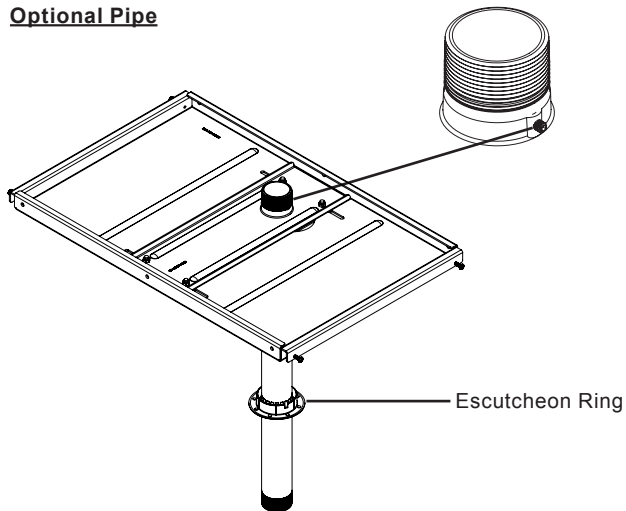

Tighten the M5 x6 Set Screws using a M2.5 Allen Key.