


Installation Instructions AST-2446/2




Step 1

Separate the upper pipe and the lower tube. Install the upper pipe in the ceiling structure using acceptable commercial standards. Screw the lower portion of the **AST2446/2** to the coupling and secure with the elen screws.

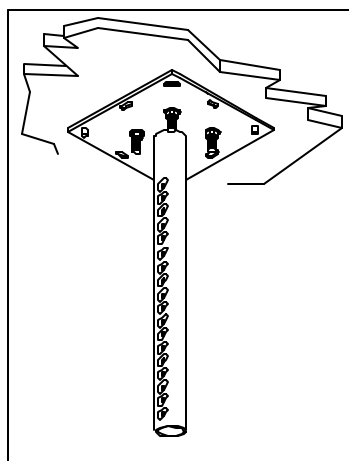


CEILING STRUCTURE
&
UPPER PIPE

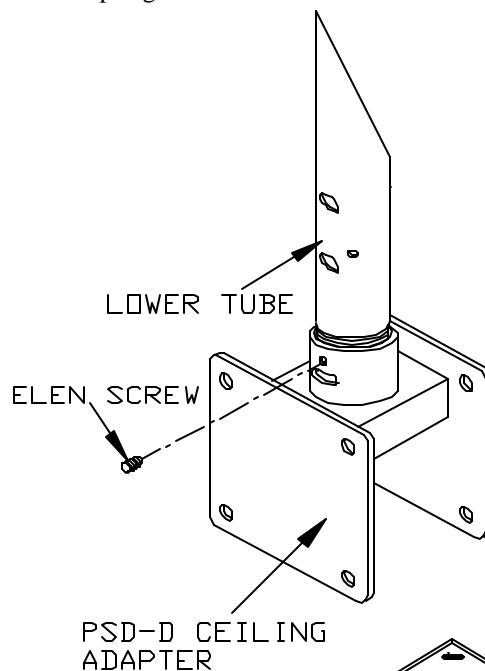

PSD-D CEILING
ADAPTER

Step 2

Once the upper pipe and lower tube have been securely installed. Insert the lower tube **(with the PSD-D attached)** inside the upper pipe. Adjust the desired height and lock it with the two (2) through bolts. Then screw in the (3) three thumb screws to stabilize the pipe and tube.

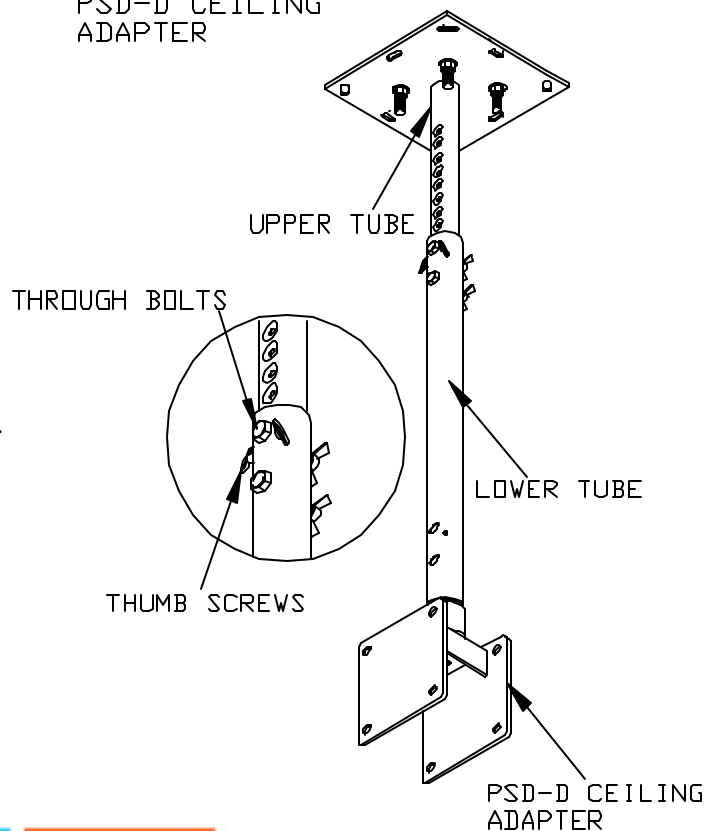

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

02/98