



# SYM-PA2

## Installation Guide



x1

5/32 or M4 Allen Key




x1

Pole Adapter



x1


Jam Nut




x1

Plastic End Cap

1

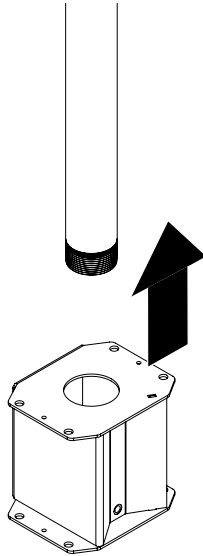


2

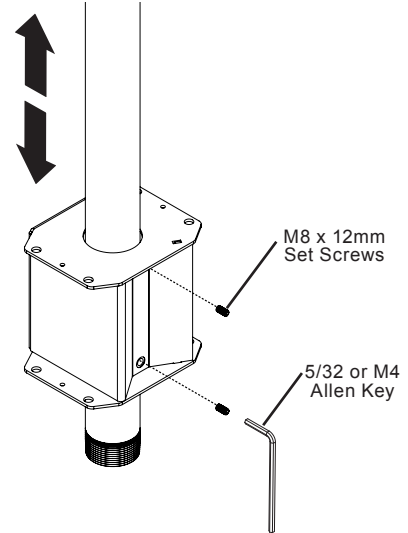


Find your desired height then tighten the pre-installed M8x12 mm Set Screws using a 5/32 or M4 Allen Key


3

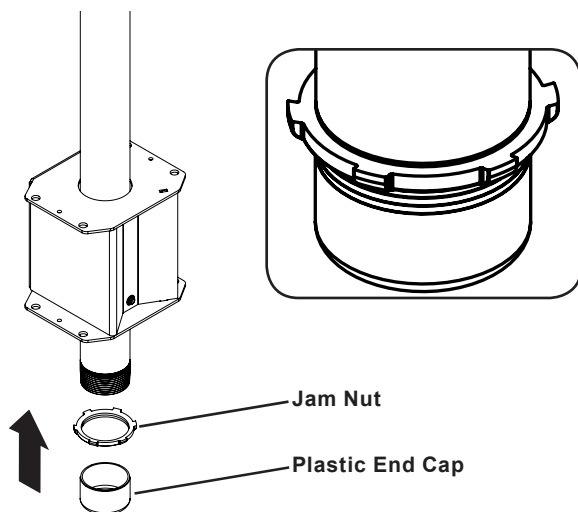


### Optional Configurations

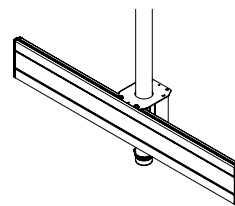

Interface Bar

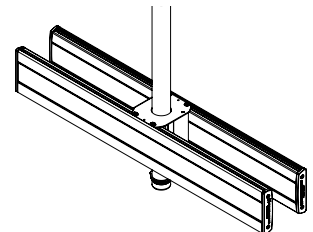

Interface Bar Back to Back

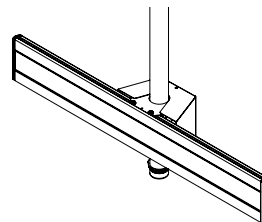

Cosmetic Cover